



QUARTER WHEEL HOUSING OUTER PANEL (ASSY): Right Side

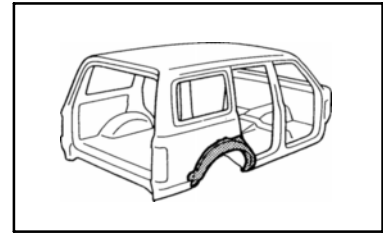


REMOVAL (With the quarter panel removed.)

Roof Side Inner to Wheel Housing Brace

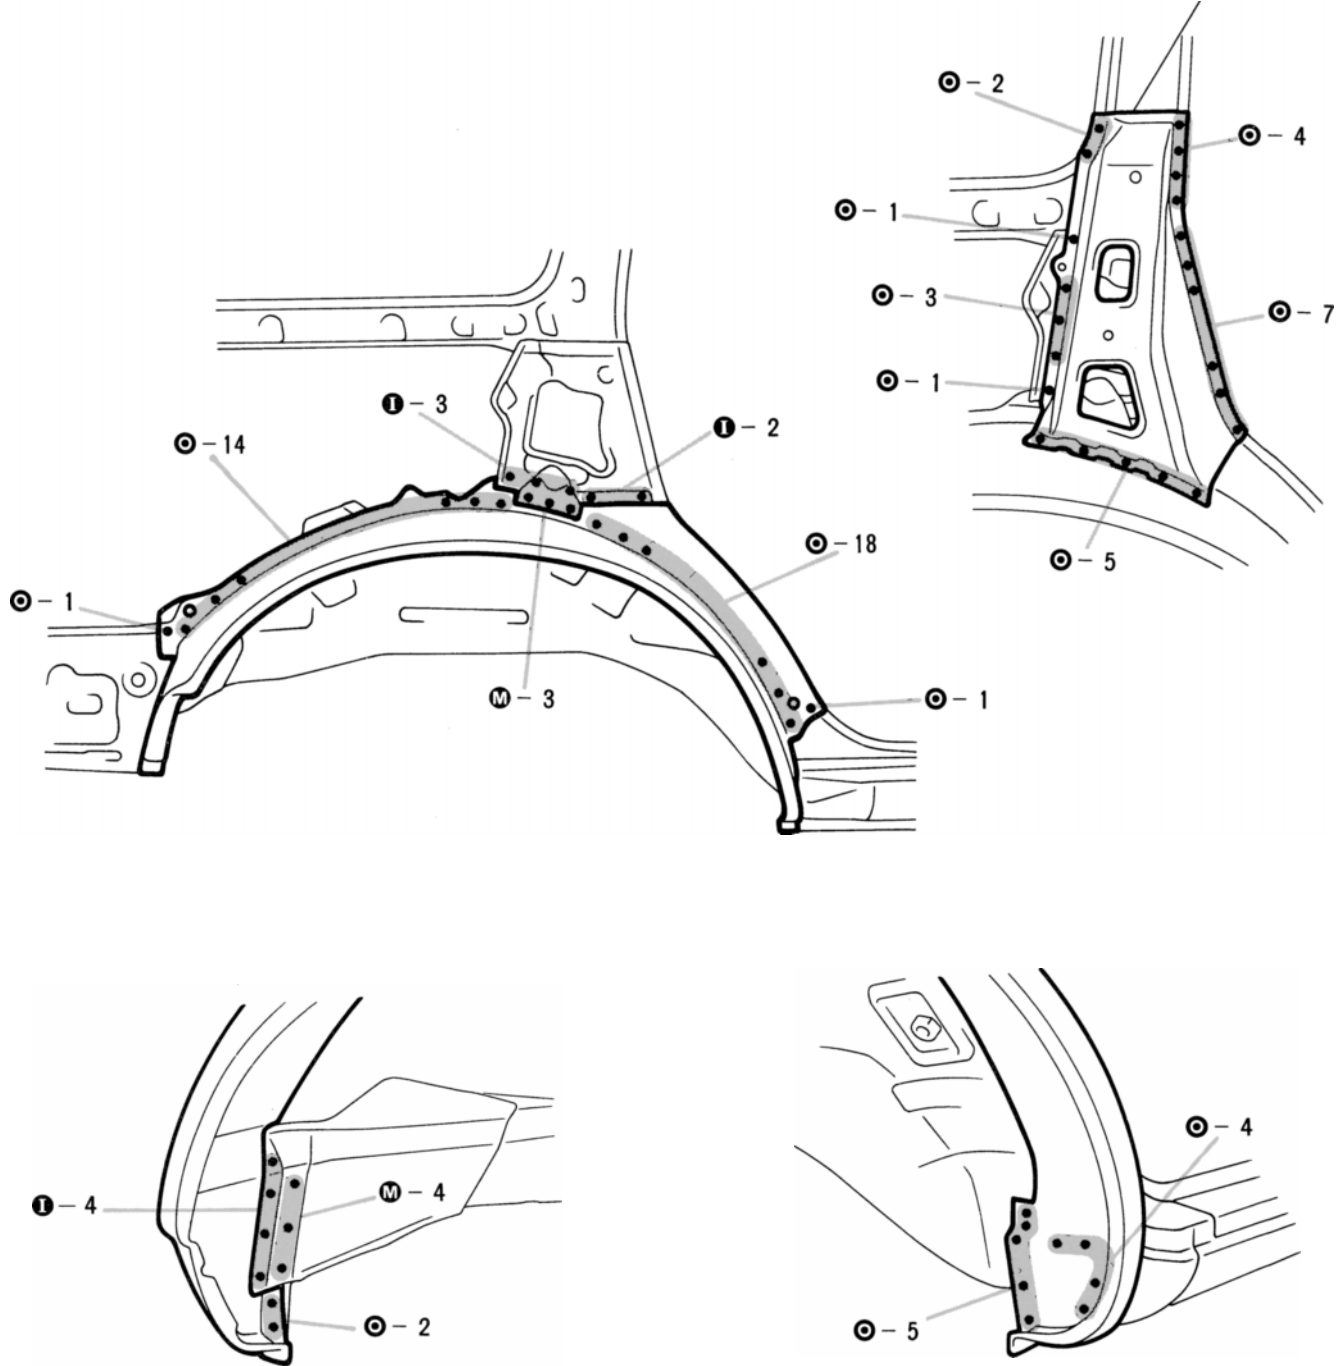

1. After removing the roof side inner to wheel housing brace, remove the quarter wheel housing outer panel.

INSTALLATION

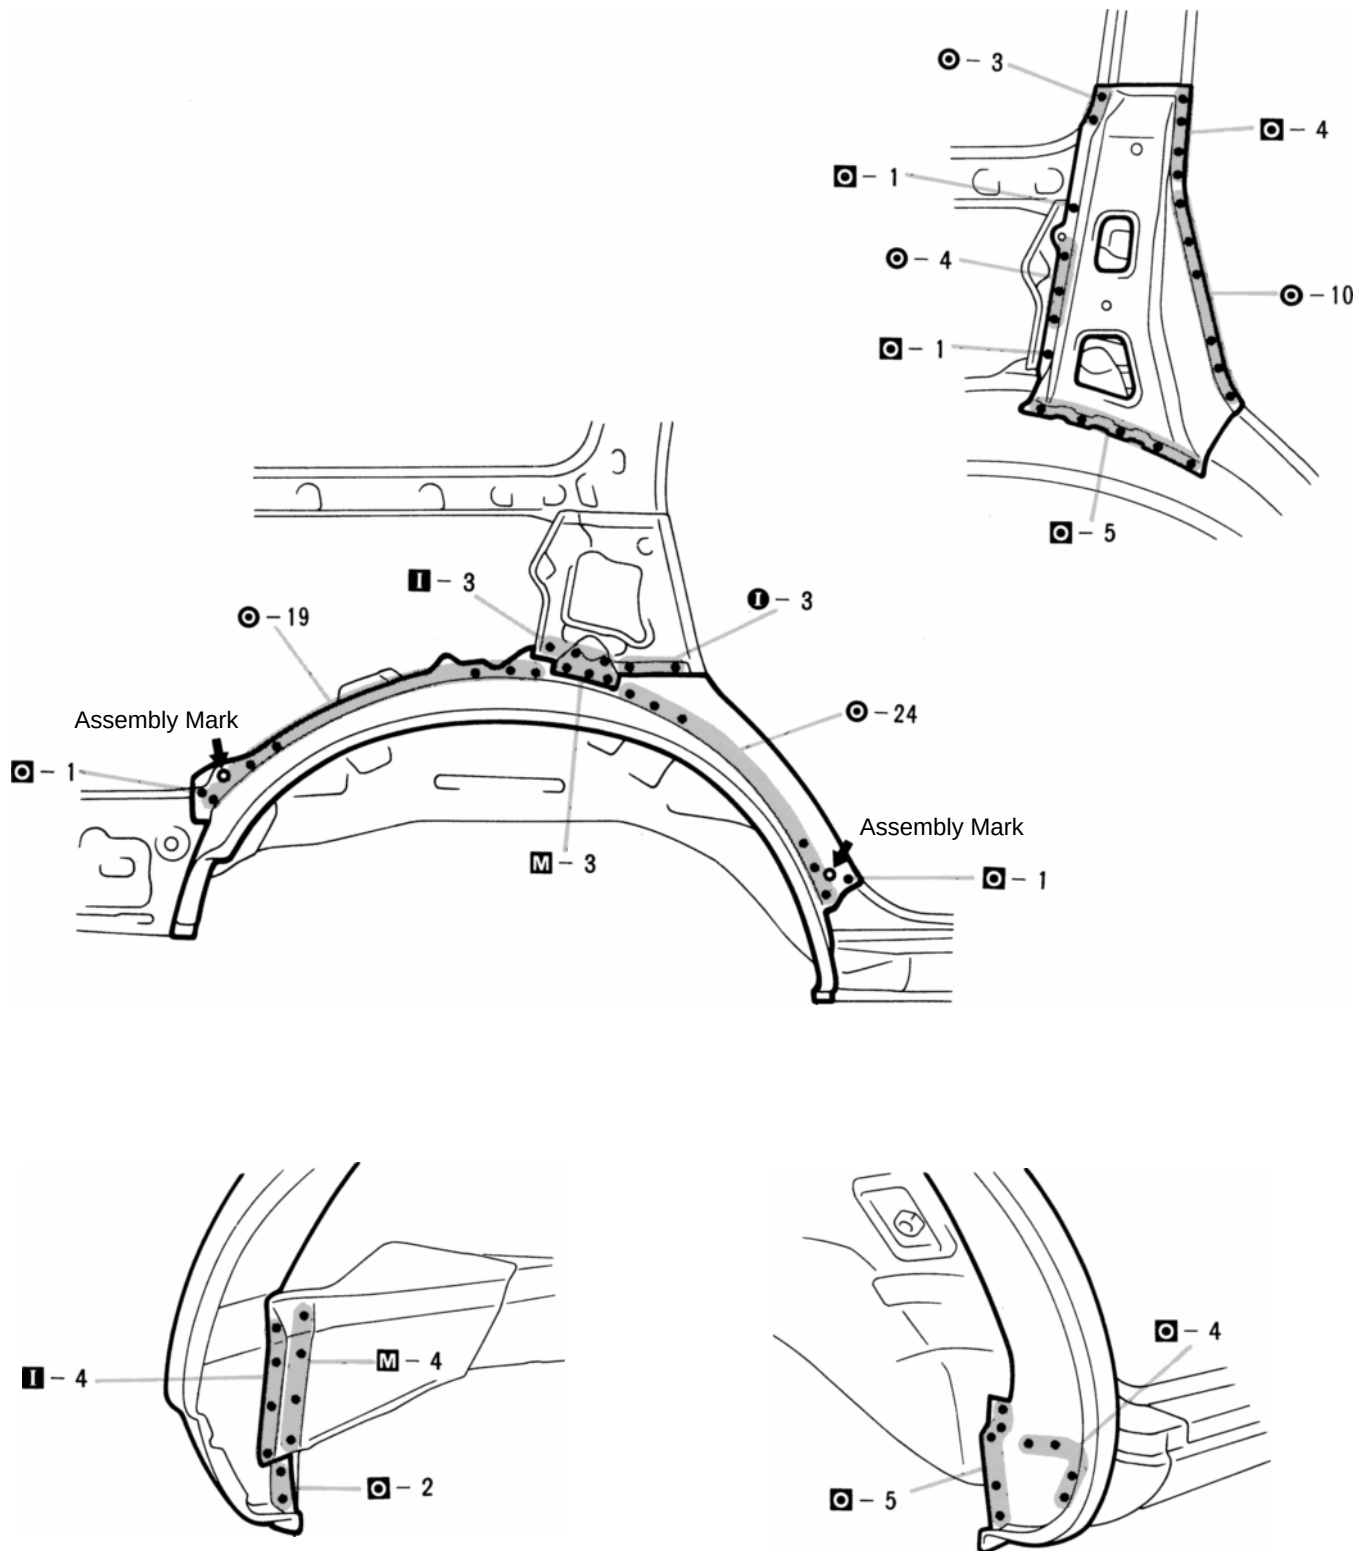

1. Determine the position of the new parts by the assembly marks of the inner and outer panels.
2. Before welding the new parts, temporarily install the quarter panel and check the fit.