


HOW TO USE THIS MANUAL

Each repair method description provided in Section RE of this manual comprises two pages, divided into 2 blocks (REMOVAL AND INSTALLATION) and includes illustrations to facilitate body repair.

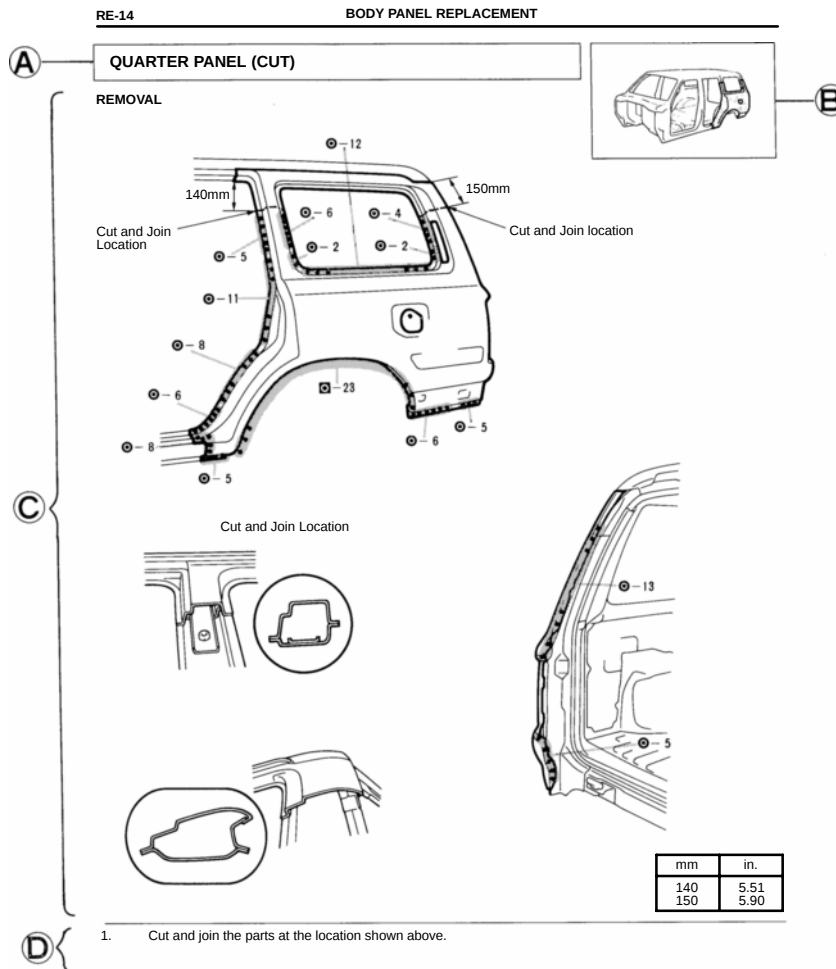

1. Cut and join the parts at the location shown above.

A : REPLACEMENT PARTS AND METHOD

QUARTER PANEL (CUT)

- Replacement method

(ASSY) Assembly replacement

(CUT) Major cutting (less than 1/2 of parts used)

(CUT-H) ... Half cutting (about 1/2 of parts used)

(CUT-P) ... Partial cutting (most of parts used)

Replacement Parts


Ⓑ : PARTS LOCATION

© : REMOVAL DIAGRAM

Describes in detail removal of the damaged parts involving repair by cutting.

ⓓ : REMOVAL GUIDE

Provides additional information to more efficiently help you perform the removal.

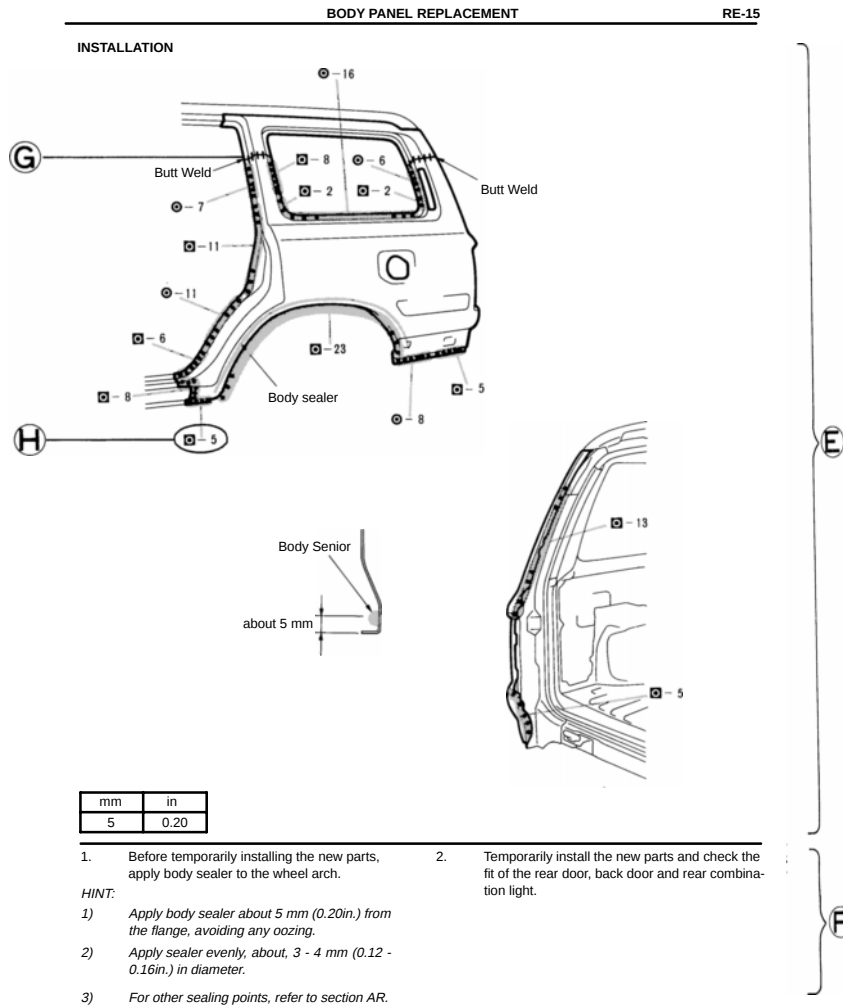

E : INSTALLATION DIAGRAM
Describes in detail installation of the new parts involving repair by welding and/or cutting, but excluding painting.

F : INSTALLATION GUIDE
Provides additional information to more efficiently help you perform the installation.

G : SYMBOLS
See page [IN-4](#).

H : ILLUSTRATION OF WELD POINTS
Weld method and panel position symbols.
See page [IN-5](#).