



VEHICLE LIFT AND SUPPORT LOCATIONS

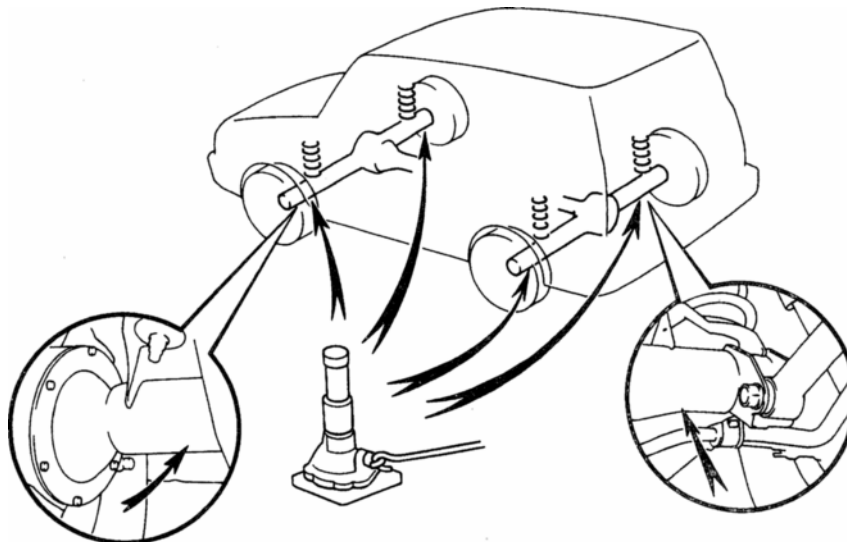

JACK POSITION

Front Under the front differential
 Rear Under the rear differential

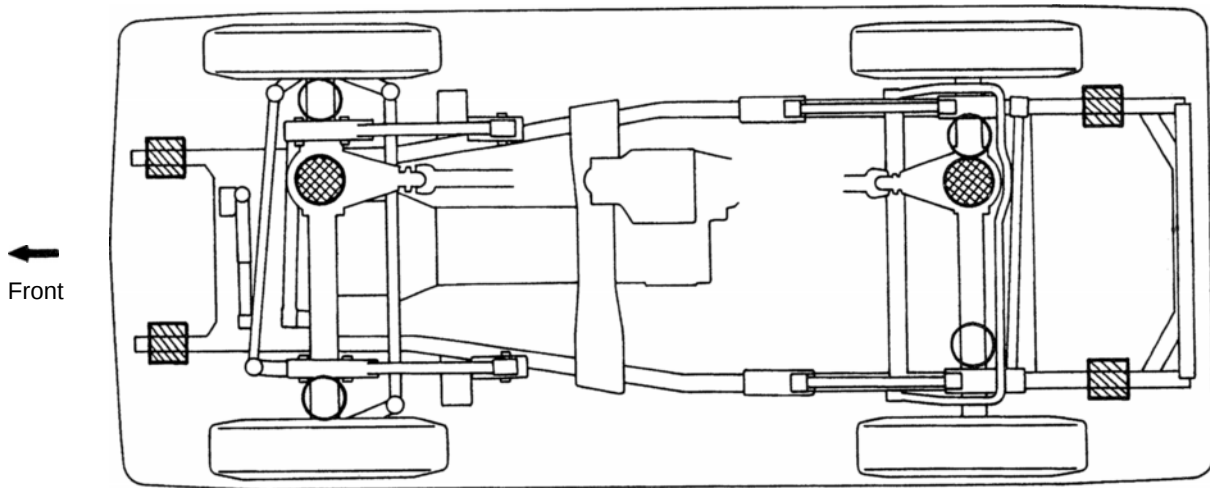

SCREW TYPE JACK POSITION



SUPPORT POSITION

Safety stand

