


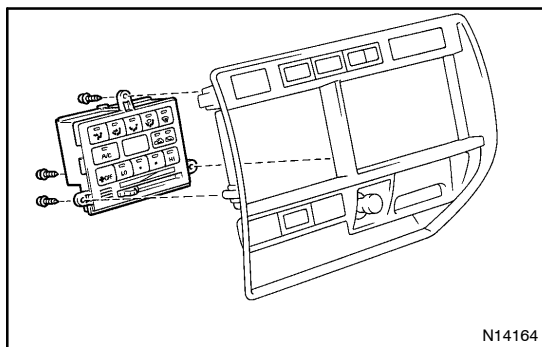

AIR CONDITIONING CONTROL ASSEMBLY REMOVAL

AC2SL-02

1. REMOVE INSTRUMENT CLUSTER FINISH CENTER PANEL WITH A/C CONTROL ASSEMBLY
2. REMOVE A/C CONTROL ASSEMBLY

Remove the 3 screws and A/C control assembly from center panel.