


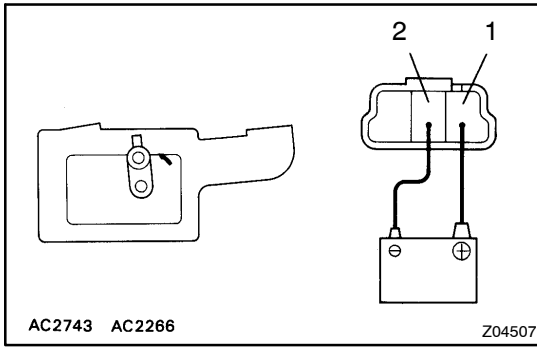


INSPECTION

INSPECT SERVOMOTOR OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2 and check that the arm rotates to the "FRESH" side smoothly.

If operation is not as specified, replace the servomotor.

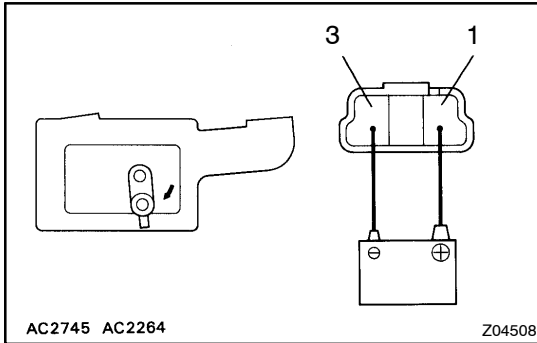

- (b) Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 3 and check that the arm rotates to the "RECIRC" side smoothly.

If operation is not as specified, replace the servomotor.