


AIR INLET SERVOMOTOR REMOVAL

AC2VQ-01

1. REMOVE GLOVE COMPARTMENT DOOR
(See page [BO-98](#))

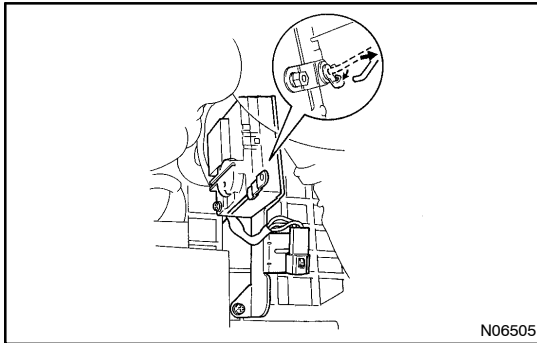

2. REMOVE AIR INLET SERVOMOTOR
 - (a) Set the damper to "RECIRC" position.
 - (b) Disconnect the air inlet servomotor connector.
 - (c) Disconnect the link from the air inlet servomotor.
 - (d) Remove the 3 screws and the air inlet servomotor.