


AIR MIX SERVOMOTOR REMOVAL

AC2VT-01

1. REMOVE INSTRUMENT PANEL (See page [BO-98](#))

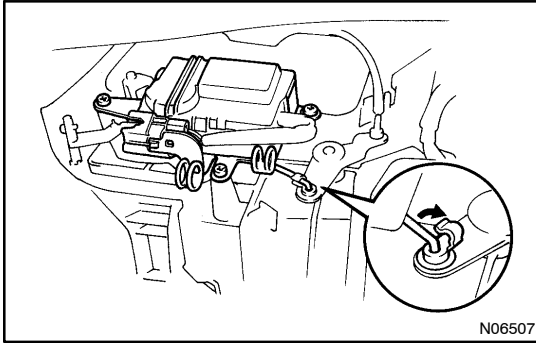

2. REMOVE AIR MIX SERVOMOTOR

- (a) Disconnect the air mix servomotor connector.
- (b) Remove the 3 screws and the air mix servomotor.
- (c) Disconnect the link from the air mix servomotor.