



AC2737
N06429

Z04512

INSPECTION

INSPECT AIR OUTLET SERVOMOTOR

- (a) Connect the positive (+) lead from the battery to terminal 5 and the negative (-) lead to terminal 6.
- (b) Connect the negative (-) lead from the battery to each terminal and check that the arm rotates to each position, as shown in the chart below.

Connected terminal	Position
1	VENT
2	Bi-Level
3	FOOT
4	FOOT/DEF
7	DEF

If operation is not as specified, replace the servomotor.