


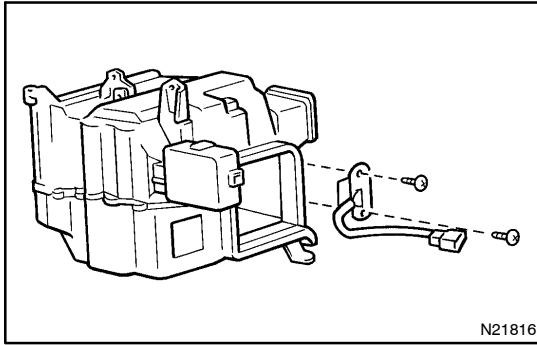

BLOWER RESISTOR REMOVAL

AC2S3-01

1. REMOVE COOLING UNIT (See page [AC-25](#))
2. REMOVE BLOWER RESISTOR
 - (a) Disconnect the connector.
 - (b) Remove the 2 screws and blower resistor.