

## DISASSEMBLY

### 1. REMOVE THESE PARTS:

- (a) A/C amplifier
- (b) Relay
- (c) Wire harness

### 2. REMOVE BLOWER RESISTOR

Remove the 2 screws and blower resistor.

### 3. SEPARATE UPPER AND LOWER UNIT CASES

- (a) Using a knife, cut off the each packing.
- (b) Remove 3 clips and 4 screws.
- (c) Separate the upper and lower unit cases.

### 4. REMOVE EVAPORATOR FROM LOWER UNIT CASE

HINT:

At the time of reassembly, if the evaporator was replaced, add compressor oil to the compressor.


**Add 40 cc (1.4 fl.oz.)**

**Compressor oil:**

**ND-OIL 8 or equivalent**

### 5. REMOVE THERMISTOR

Pull out the thermistor from the evaporator.

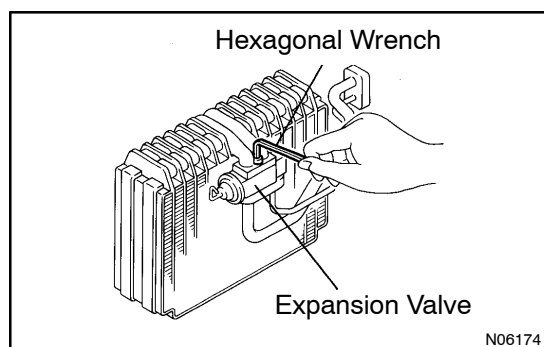

### 6. REMOVE EXPANSION VALVE

Using a hexagon wrench, remove the 2 bolts and separate the expansion valve and evaporator.

**Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)**

HINT:

At the time of reassembly, lubricate 4 new O-rings with compressor oil and install the tubes.