




INSPECTION

INSPECT SWITCH CONTINUITY

Check the continuity between terminals of the switch, as shown in the chart below.
If continuity is not as specified, replace the switch.

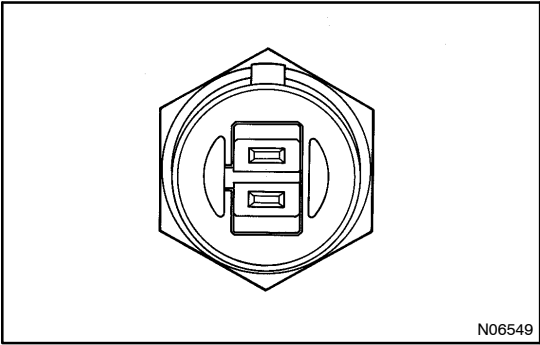