


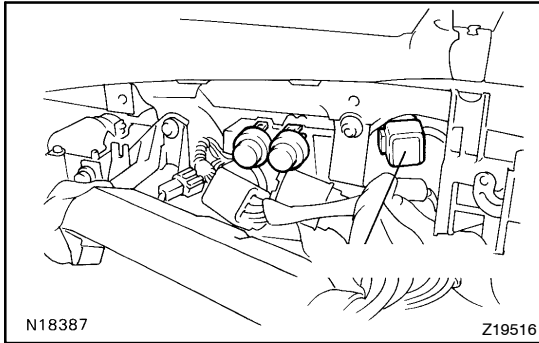

EXTRA-HI RELAY REMOVAL

AC2V9-01

1. REMOVE INSTRUMENT PANEL (See page [BO-98](#))
2. REMOVE EXTRA-HI RELAY FROM COOLING UNIT