


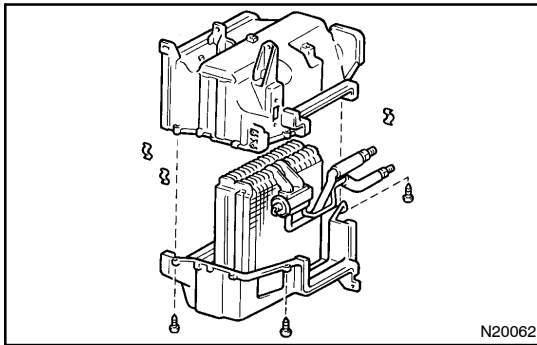

REMOVAL

1. **REMOVE COOLING UNIT** (See page [AC-25](#))
2. **REMOVE EVAPORATOR**
 - (a) Using a knife, cut off each packing.
 - (b) Remove the 3 screws and 3 clips, separate the upper and lower case, then remove the evaporator.

HINT:

At the time of installation, if evaporator was replaced, add compressor oil to the compressor.

Add 40 cc (1.4 fl.oz.)

Compressor oil:

ND-OIL 8 or equivalent