


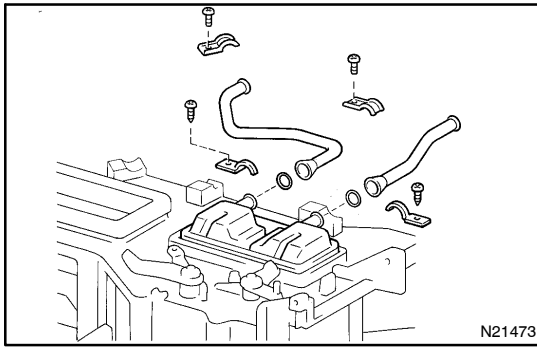

HEATER RADIATOR REMOVAL

AC2RL-01

1. DRAIN ENGINE COOLANT FROM RADIATOR

HINT:

It is not necessary to drain out all the coolant.

2. REMOVE HEATER UNIT (See page [AC-30](#))

3. REMOVE HEATER RADIATOR

- (a) Remove 4 screws and 4 plates and clamp.
- (b) Disconnect the heater radiator pipe from the heater radiator.
- (c) Pull the radiator upward.