


REMOVAL

1. REMOVE COOLING UNIT (See page [AC-25](#))
2. DRAIN ENGINE COOLANT FROM RADIATOR


HINT:

At the time of installation, it is not necessary to drain out all the coolant.

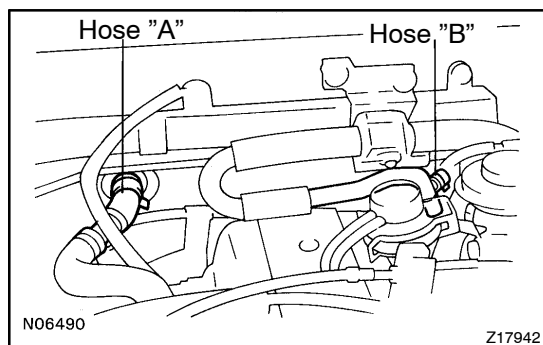

3. DISCONNECT WATER HOSES FROM HEATER RADIATOR PIPES


- (a) Grip the claws of the hose clip with pliers and slide the clip along the hose to a place where it does not clamp the hose to the pipe.
- (b) Disconnect the water hoses.

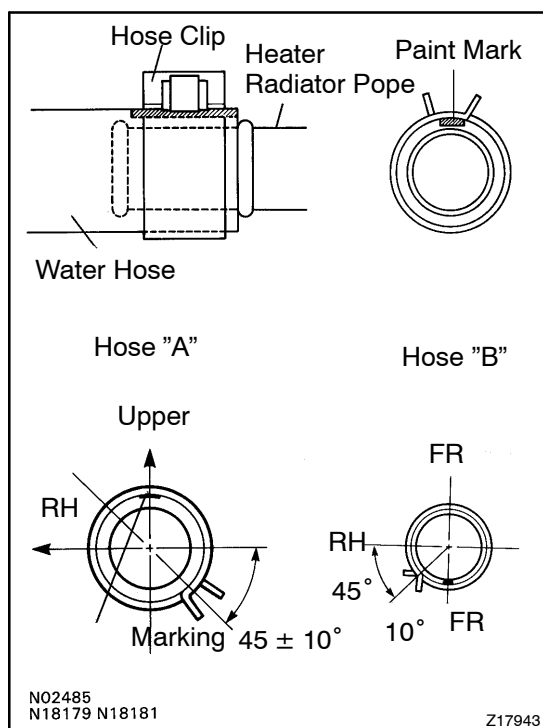

HINT:


- At the time of installation, Push the water hose onto the heater radiator pipe as far as the ridge on the pipe.
- At the time of installation, Install the hose clip in a position, as shown in the illustration.

4. REMOVE PIPE GROMMETS
5. REMOVE INSTRUMENT PANEL SAFETY PAD (See page [BO-98](#))
- 6.
7. REMOVE SERVOMOTOR AMPLIFIER (See page [AC-132](#))
8. REMOVE INSTRUMENT PANEL REINFORCEMENT (See page [BO-98](#))

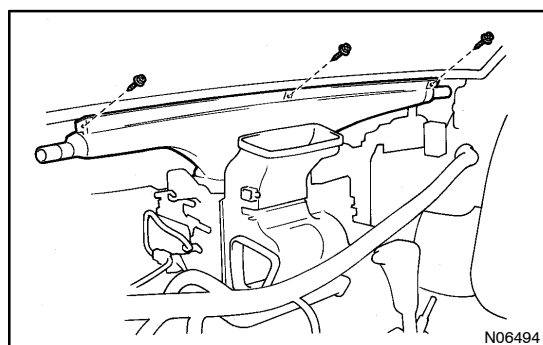

9. REMOVE HEATER UNIT

- (a) Remove the 3 screws and defroster nozzle.

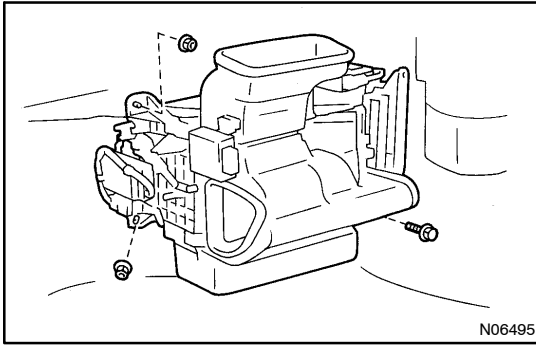

- (b) Remove the 2 nuts and a screw, then remove heater unit.