


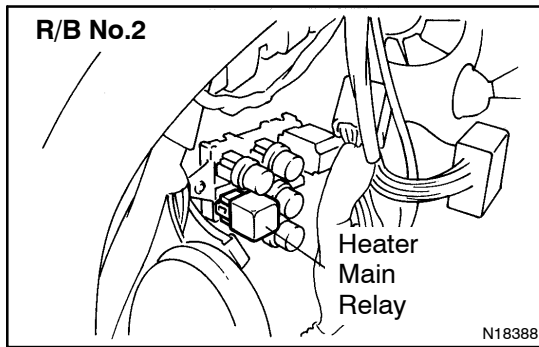

HEATER MAIN RELAY REMOVAL

AC2V3-01

1. REMOVE FRONT DOOR SCUFF PLATE LH
2. REMOVE HEATER MAIN RELAY FROM R/B NO.2