


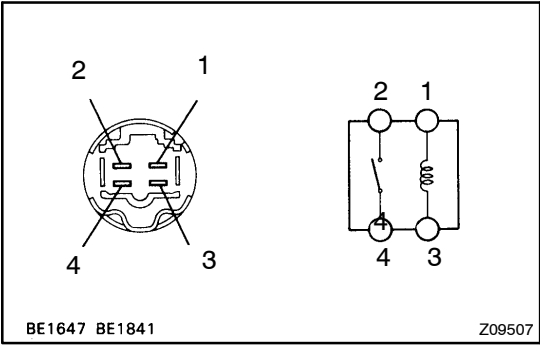

INSPECTION

INSPECT MAGNETIC CLUTCH RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 3	Continuity
Apply B+ between terminals 1 and 3.	2 – 4	Continuity

If continuity is not as specified, replace the relay.