


POWER TRANSISTOR REMOVAL

AC2VN-01

1. REMOVE GLOVE COMPARTMENT PARTS
(See page [BO-98](#))
2. REMOVE A/C AMPLIFIER (See page [AC-147](#))

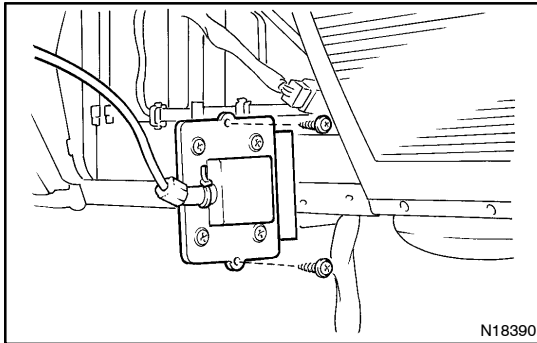

3. REMOVE POWER TRANSISTOR
 - (a) Disconnect the connector.
 - (b) Remove the 2 screws and power transistor.