



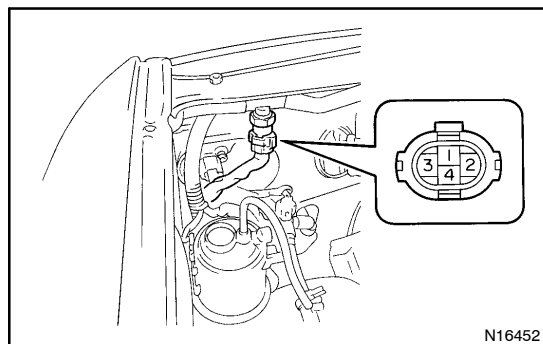

PRESSURE SWITCH ON-VEHICLE INSPECTION

AC2SB-01

1. **INSTALL MANIFOLD GAUGE SET**
2. **DISCONNECT CONNECTOR FROM PRESSURE SWITCH**
3. **RUN ENGINE AT APPROX. 1,500 RPM**

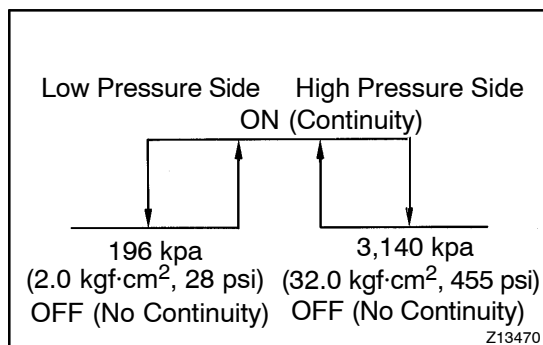

4. **INSPECT PRESSURE SWITCH OPERATION**
 - (a) Connect the positive (+) lead from the ohmmeter to terminal 2 and the negative (-) lead to terminal 1.
 - (b) Check continuity between terminals when refrigerant pressure is changed, as shown in the illustration.

If operation is not as specified, replace the pressure switch.
5. **STOP ENGINE AND REMOVE MANIFOLD GAUGE SET**
6. **CONNECT CONNECTOR TO PRESSURE SWITCH**