


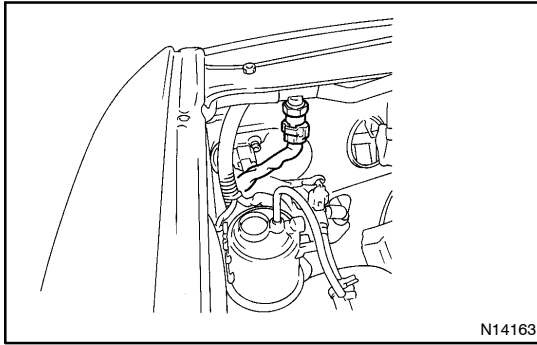

REMOVAL

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

HINT:

At the time of installation, evacuate air from refrigeration system.

Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount:

850 ± 50 g (29.98 ± 1.76 oz.)

2. REMOVE PRESSURE SWITCH

- (a) Disconnect the connector.
- (b) Remove the pressure switch from the liquid tube.

Torque: 10 N·m (100 kgf·cm, 7 ft·lbf)

HINT:

At the time of installation, lubricate a new O-ring with compressor oil and install the switch.

HINT:

Lock the switch mount on the tube with an open end wrench, being careful not to deform the tube, and remove the switch.