


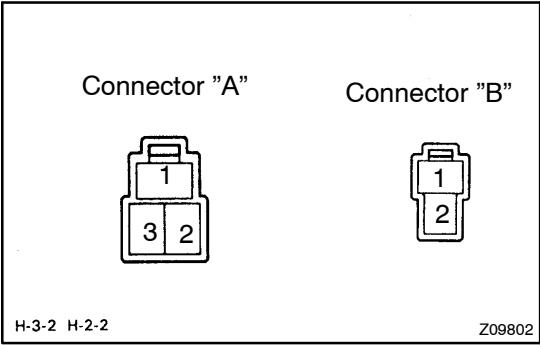

INSPECTION

INSPECT BLOWER RESISTOR CONTINUITY

Condition	Tester connection	Specified condition
Constant	A1 – B1 A2 – A3 – B2	Continuity

If continuity is not as specified, replace the blower resistor.