


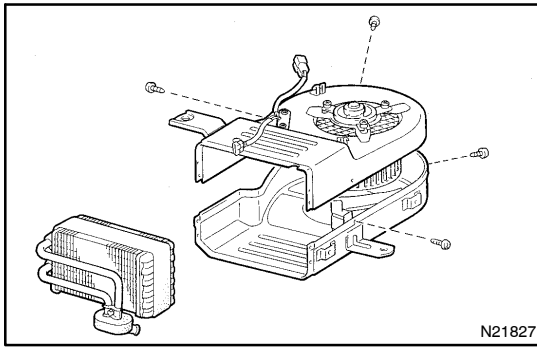

REAR HEATER RADIATOR REMOVAL

AC2RO-01

1. **REMOVE REAR HEATER UNIT** (See page [AC-36](#))
2. **REMOVE HEATER RADIATOR**
 - (a) Remove the wire harness clamps.
 - (b) Remove the 4 screws and 5 clips and separate the heater cases.
 - (c) Pull out the heater radiator.