


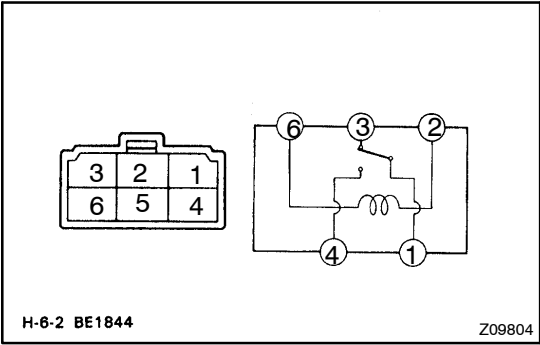

INSPECTION

INSPECT REAR HEATER RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	2 – 6 1 – 3	Continuity
Apply B+ between terminals 2 and 6.	1 – 4	Continuity

If continuity is not as specified, replace the relay.