


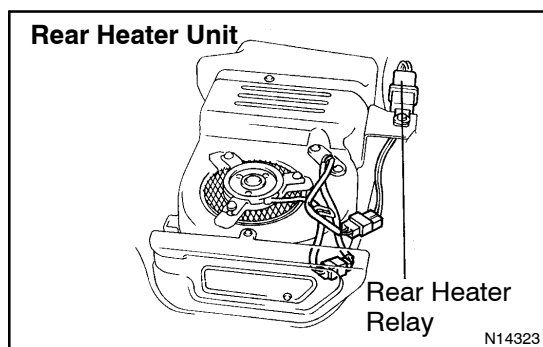

REAR HEATER RELAY REMOVAL

AC2V5-01

1. REMOVE FRONT SEAT LH
2. REMOVE REAR HEATER RELAY FROM REAR HEATER UNIT
 - (a) Disconnect the relay.
 - (b) Remove the screw and relay.