


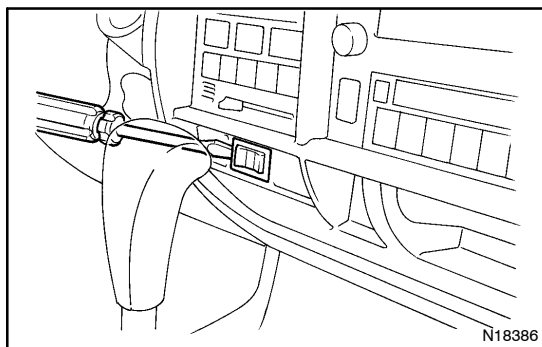

REAR HEATER SWITCH REMOVAL

AC2VJ-01

REMOVE REAR HEATER SWITCH

Using a screw driver, pull out the switch then disconnect the connector.

HINT:

Tape the screwdriver tip before use.