

DISASSEMBLY

REMOVE REAR BLOWER RESISTOR

- (a) Disconnect the connectors.
- (b) Remove the 2 screws and rear blower resistor.

SEPARATE HEATER UNIT CASES

Remove the 4 screws and separate the heater unit cases.

REMOVE REAR HEATER RADIATOR

REMOVE REAR BLOWER MOTOR

- (a) Remove the nut and blower fan.
- (b) Remove the 3 screws and blower motor.