


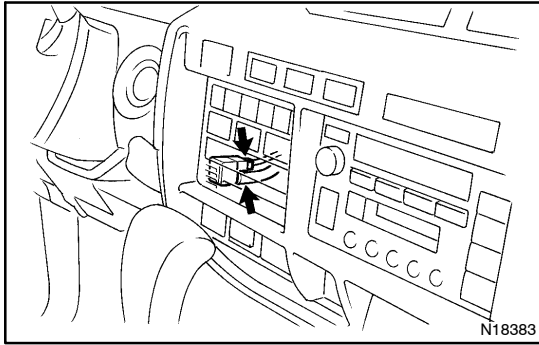

ROOM TEMPERATURE SENSOR REMOVAL

AC2W2-01

1. REMOVE CENTER CLUSTER FINISH PANEL
(See page [BO-98](#))
2. REMOVE SENSOR
 - (a) Disconnect the aspirator hose.
 - (b) Remove the sensor, then disconnect the connector.