


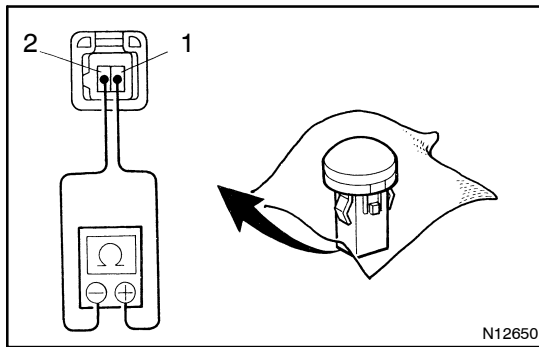


INSPECTION

INSPECT SENSOR CONTINUITY

- (a) Cover the sensor by a cloth, check that there is no continuity between terminals.

If continuity is not as specified, replace the sensor.

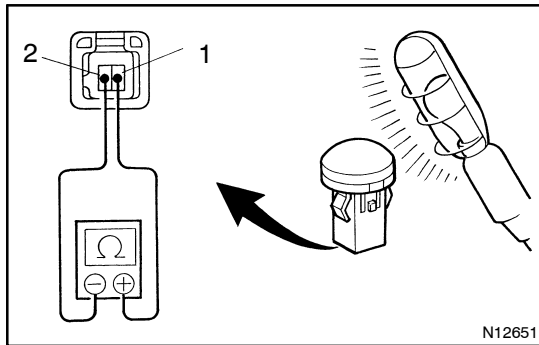

- (b) Remove the cloth from the sensor and subject the sensor to electric light, check that the continuity between terminals.

If continuity is not as specified, replace the sensor.