


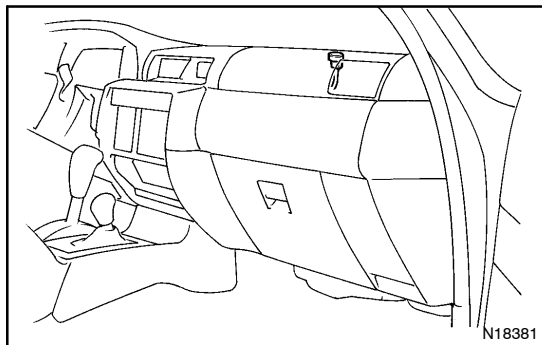

SOLAR SENSOR REMOVAL

AC2VZ-01

REMOVE SENSOR

Pull out the sensor from the safety pad.