


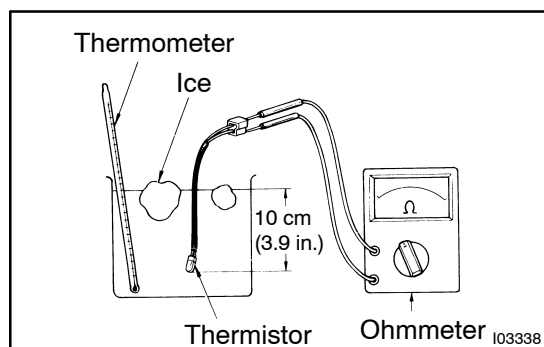


## INSPECTION

### 1. REMOVE THERMISTOR

### 2. INSPECT THERMISTOR RESISTANCE

- (a) Place the thermistor in cold water, while varying temperature of the water, measure resistance at the connector and at the same time, measure temperature of the water with a thermometer.

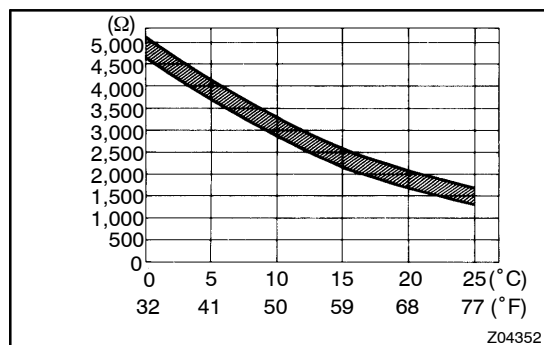

- (b) Compare the 2 readings on the chart.

If resistance is not as specified, replace the thermistor.

### 3. REINSTALL THERMISTOR