


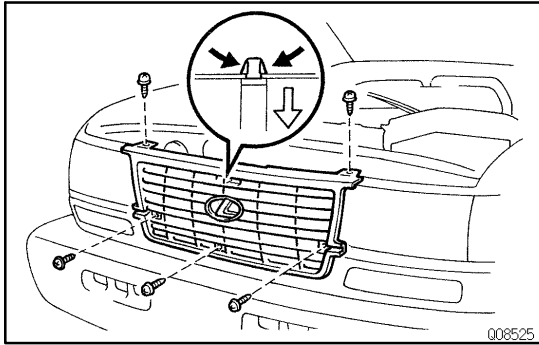

REMOVAL


1. REMOVE RADIATOR GRILLE

- Remove the 5 screws.
- Using a screwdriver, disconnect the clip.

HINT:


Tape a screwdriver tip before use.

- Remove the radiator grille.

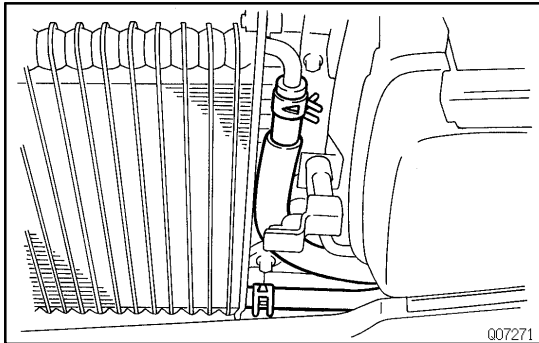

2. REMOVE OIL COOLER

- Loosen the 2 clips and disconnect the 2 hoses.

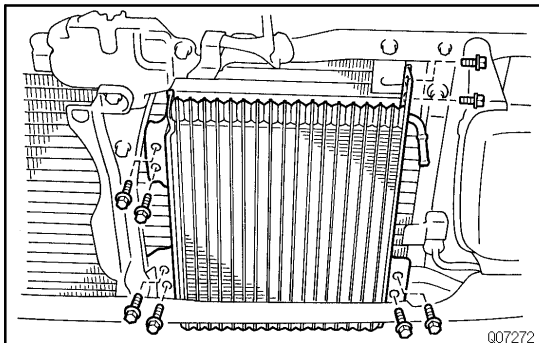

- Remove the 8 bolts and oil cooler.
Torque: 11 N·m (115 kgf·cm, 8 ft·lbf)