

THROTTLE CABLE ON-VEHICLE REPAIR

AT0T6-02



1. DISCONNECT THROTTLE CABLE

- (a) Disconnect the cable from the throttle linkage.
- (b) Disconnect the cable from the cable clamps in the engine compartment.
- (c) Remove the bolt and disconnect the cable clamp from the torque converter clutch housing.

2. REMOVE VALVE BODY (See page AT-8)

3. REMOVE THROTTLE CABLE

Remove the retaining bolt and pull out the throttle cable.

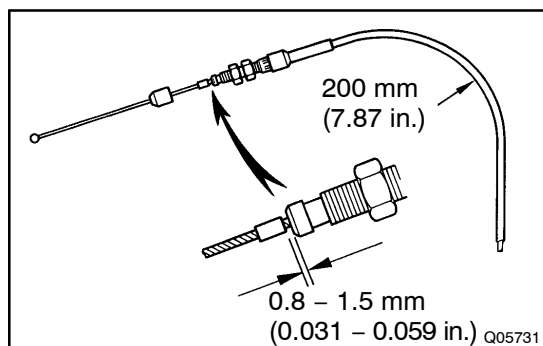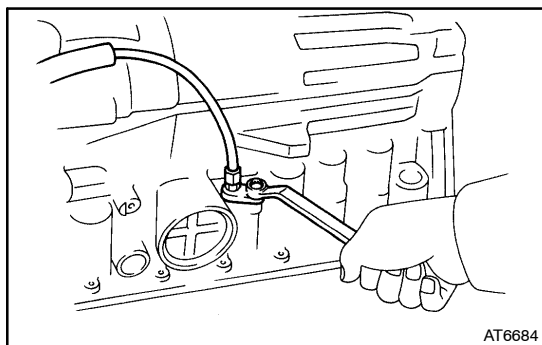

4. REINSTALL THROTTLE CABLE

To install, follow the removal procedure in reverse.

HINT:

If throttle cable is new, stake the stopper on the inner cable.

- (a) Bend the cable so there is a radius of about 200 mm (7.87 in.)
- (b) Pull the inner cable lightly until slight resistance is felt, and hold it there.
- (c) Stake the stopper, 0.8–1.5 mm (0.031–0.059 in.) from the end of outer cable.
 - After installation, fill ATF and check the fluid level. (See page DI-135)
 - Adjust the throttle cable. (See page DI-135)