


# CLOCK TROUBLESHOOTING

BE1Q0-01


HINT:  
Troubleshoot the lock according to the table below.

|                           |   |
|---------------------------|---|
| Clock will operate        | 1 |
| Clock loses or gains time | 2 |


⌚ 1.5 seconds/day

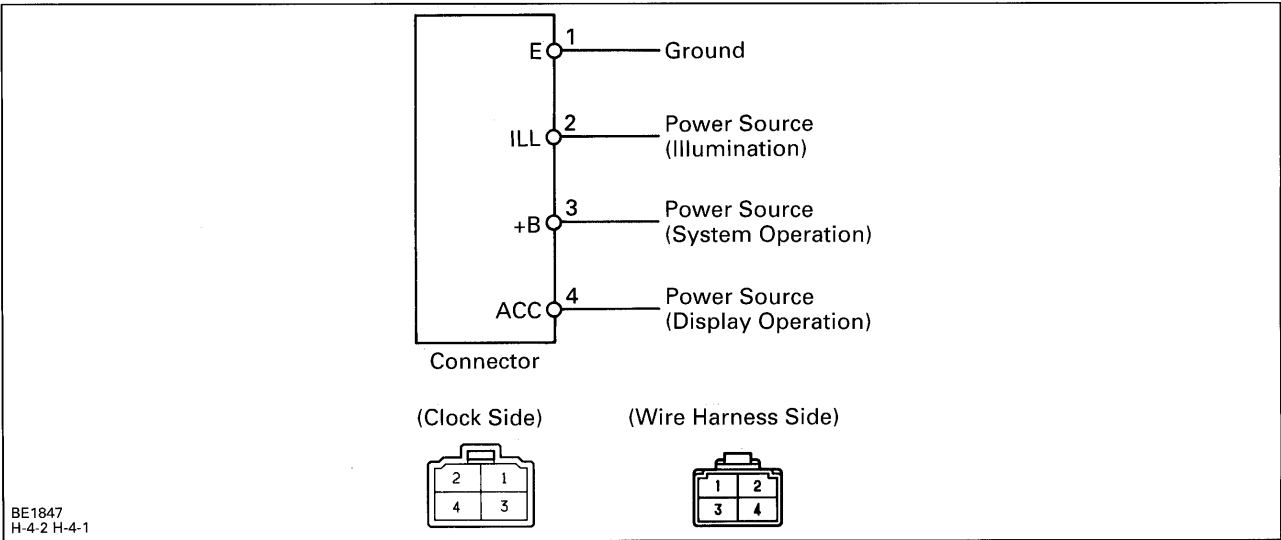

## 1 CLOCK WILL NOT OPERATE

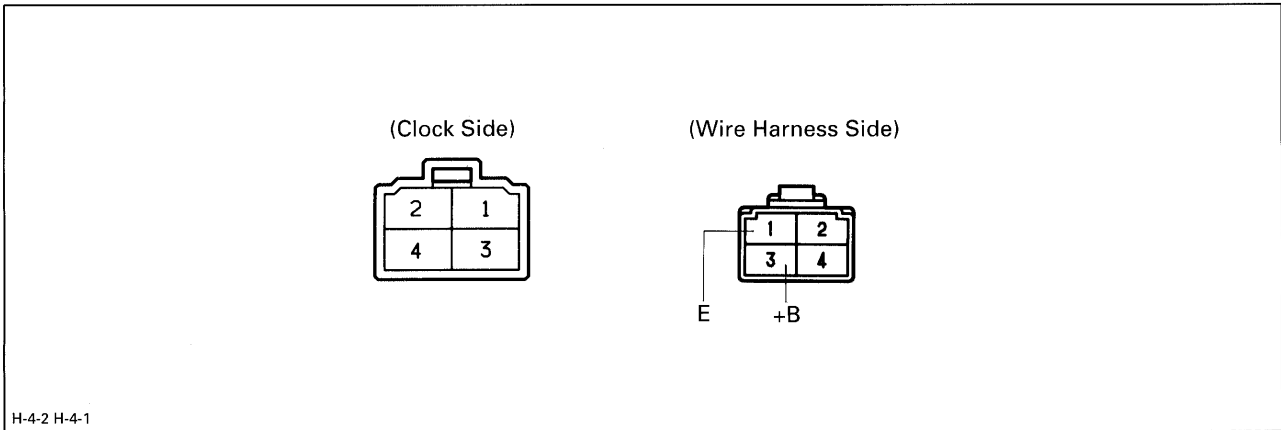

- (a) Check that the battery positive voltage is 10 – 16 V. if voltage is not as specified, replace the battery.
- (b) Check that the DOME fuse is not blown. If the fuse is blown, replace the fuse and check for short.
- (c) Troubleshoot the clock as follows.  
HINT: Inspect the connector on the wire harness side.

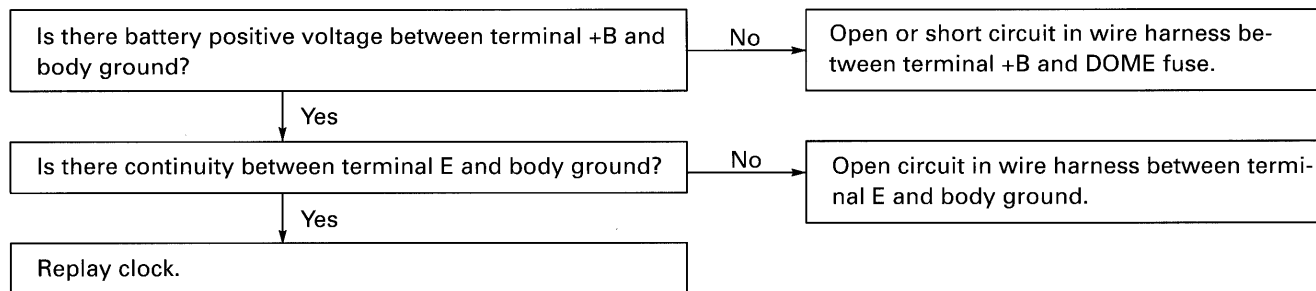

## 2 CLOCK LOSES OR GAINS TIME

- Check the the battery positive voltage is 10 – 16 V.  
If voltage is not as specified, replace the battery.
- Inspect the error of the clock.  
**Allowable error (per day):  $\pm 1.5$  seconds**
- Check that the clock adjusting button is sticking in position and has failed to return.  
If the button is not returned, repair or replace the clock.
- Troubleshoot the clock as follows.  
**HINT:** Inspect the connector on the wire harness side.

