


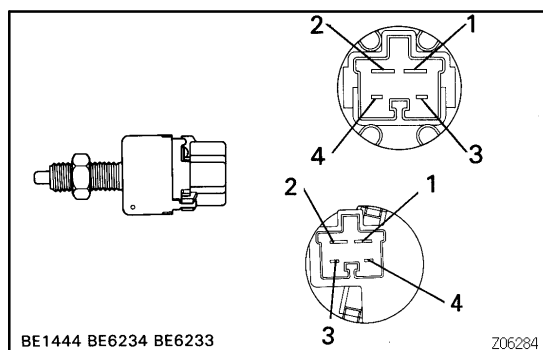


INSPECTION

1. INSPECT STOP LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Switch pin free (Brake pedal depressed)	1 - 2	Continuity
Switch pin pushed in (Brake pedal released)	3 - 4 (w/CCS)	Continuity

If continuity is not as specified, replace the switch.

Wire Harness Side

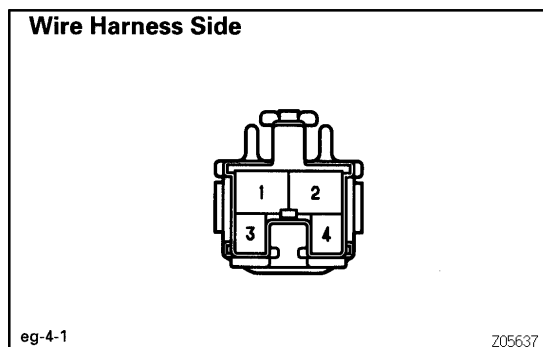

2. INSPECT STOP LIGHT SWITCH CIRCUIT

Disconnect the connector from the switch and inspect the connector on the wire harness side, as shown.

Tester connection	Condition	Specified condition
2 - Ground	Constant	Battery positive voltage

If the circuit is not as specified, inspect power source or wire harness.