


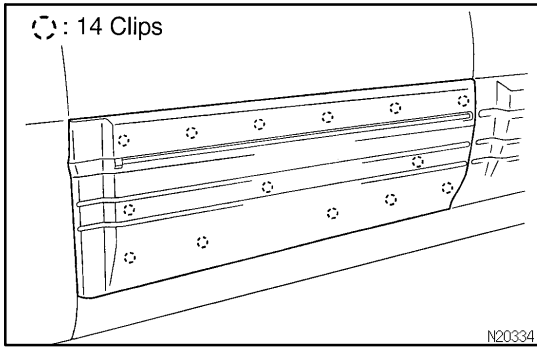

DOOR OUTSIDE MOULDING REMOVAL

B03FR-01

1. REMOVE FRONT DOOR OUTSIDE MOULDING

- (a) Using a heat light, heat the moulding to 40 – 60°C (104 – 140°F).

NOTICE:


Do not heat moulding excessively.

- (b) Cut the adhesive tape with a knife.

NOTICE:


- If reusing the moulding, take care not damage the moulding.
- Do not damage the body.

- (c) Remove the moulding.

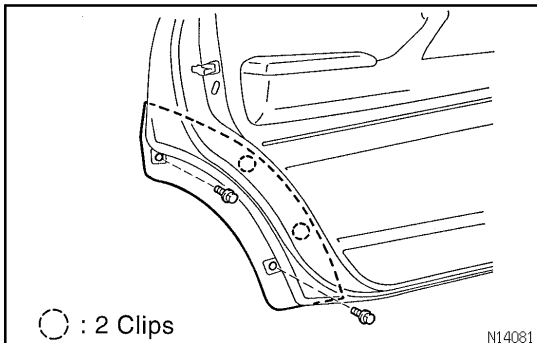

2. REMOVE REAR DOOR OUTSIDE MOULDING

- (a) Remove the 2 screws.

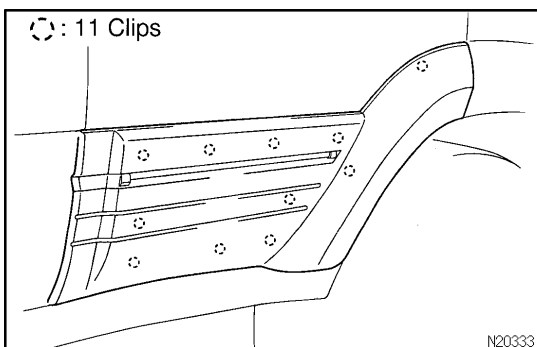

- (b) Remove the rear door outside moulding.

HINT:

Remove the rear door outside moulding in the same way as the front door outside moulding.