


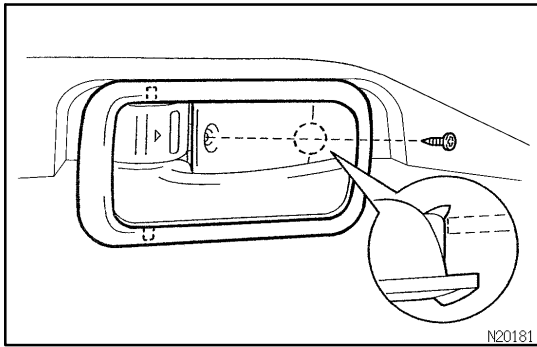


DISASSEMBLY

1. REMOVE THESE PARTS:


HINT:

Tape a screwdriver tip before use.

- (a) Door inside handle bezel

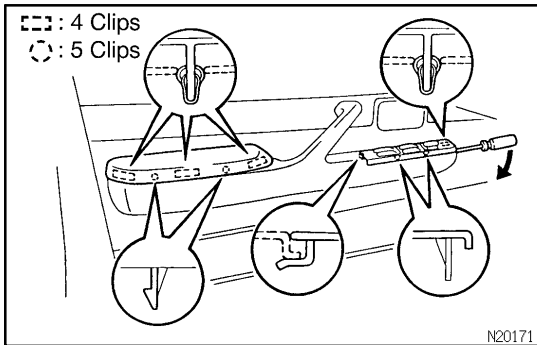

- (b) Armrest
(c) Armrest panel base upper
(d) Courtesy light
(e) Lower frame bracket garnish

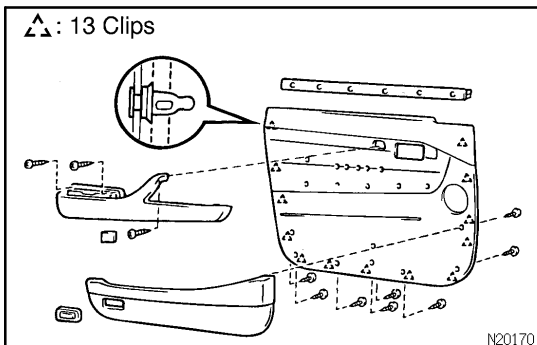

2. REMOVE DOOR TRIM

- (a) Remove the 3 screws from the door trim.
(b) Insert a screwdriver between the door and door trim to pry out.
(c) Pull the trim upward to remove it.


NOTICE:

Be careful not to damage the door and door trim.

HINT:

Tape the screwdriver tip before use.

- (d) Remove the 11 screws and armrest base from the door trim.
(e) Remove the inner weatherstrip from the door trim.
(f) Remove the 8 screws and door pocket from the door trim.

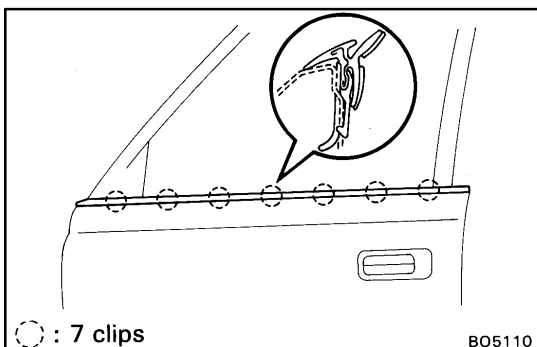

3. REMOVE THESE PARTS:

- (a) Door belt moulding

HINT:


Pry out the clip from the edge of the panel, and remove the moulding .

- (b) Door weatherstrip

NOTICE:

Do not pull strongly on the weatherstrip as it may tear.

- (c) Door inside handle
(d) Door lock control relay

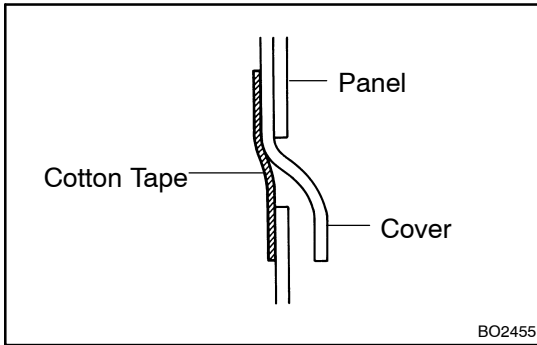

- (e) Service hole cover

NOTICE:

At the time of reassembly, do not block the trim clip sealing with the tape.


HINT:

At the time of reassembly, bring out the link through the service hole cover.

- (f) Door glass run
(g) Rear lower frame


4. REMOVE DOOR SPEAKER

Remove the 4 speaker and disconnect the connector, then remove the speaker.

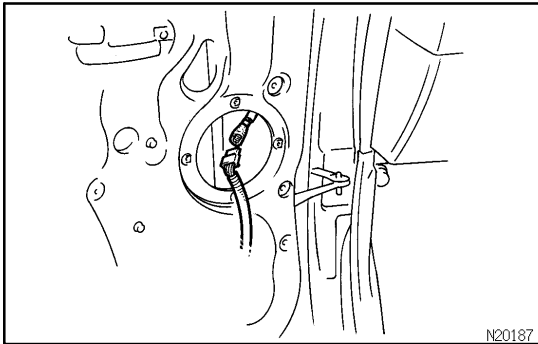


5. REMOVE OUTSIDE REAR VIEW MIRROR

- (a) Remove a clip and disconnect the connector.
(b) Remove the 3 bolts and outside rear view mirror.

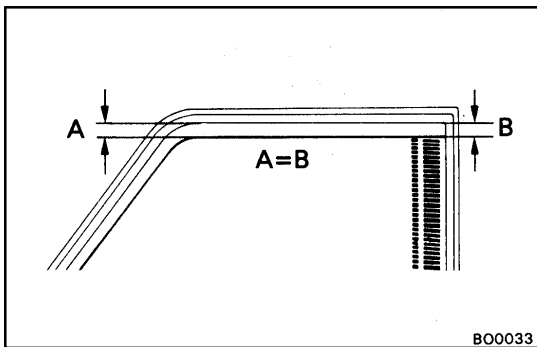

HINT:


At the time of reassembly, adjust the equalizer arm up to down and tighten if where dimensions A and B, as shown are equal.

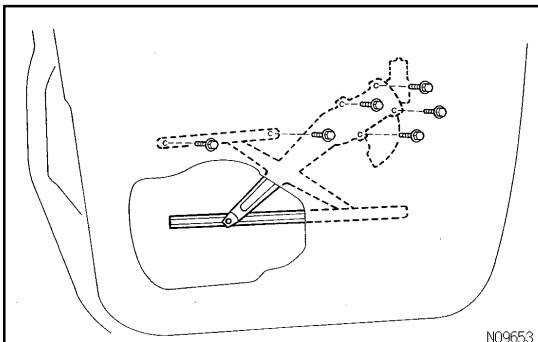

6. REMOVE THESE PARTS:

- (a) Door glass
(b) Window regulator

Torque: 5.0 N·m (50 kgf·cm, 43 in·lbf)

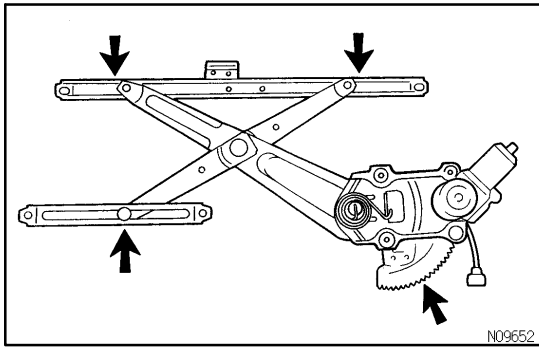
**NOTICE:**

At the time of reassembly, do not apply grease to the spring.

HINT:

At the time of reassembly, apply MP grease to the sliding surface and gears of the window regulator.

(c) Locking and opening control link

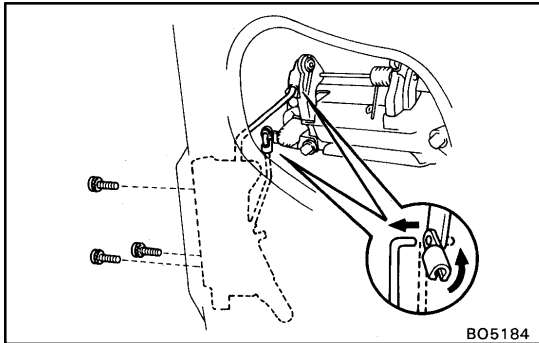


(d) Door lock

HINT:

At the time of reassembly, apply adhesive to the 3 screws.

Part No.08833-00070, THREE BOND 1324 or equivalent.

Torque: 5.0 N·m (50 kgf·cm, 43 in·lbf)

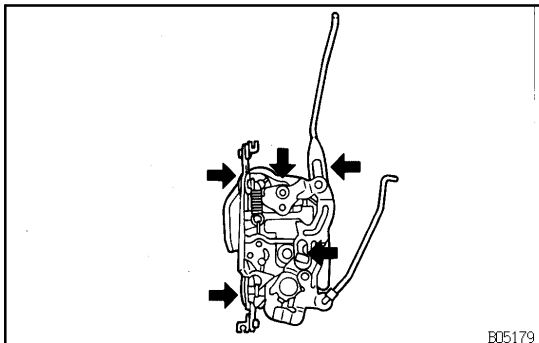**HINT:**

At the time of reassembly, apply MP grease to the sliding surface of the door lock.

(e) Door outside handle

(f) Door lock cylinder