



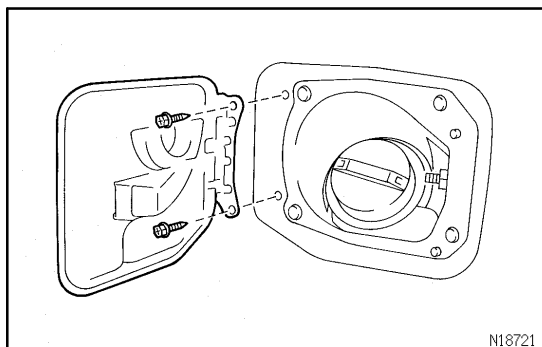

REMOVAL

1. REMOVE FUEL FILLER OPENING LID

Remove the 2 screws and lid.

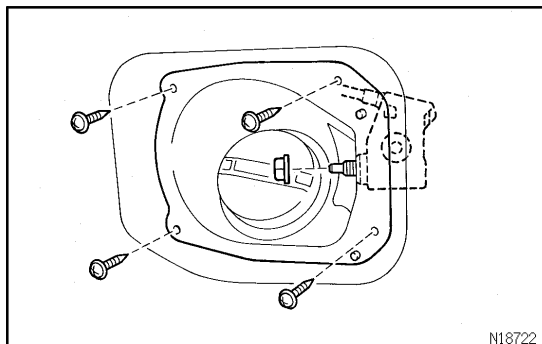

2. REMOVE FUEL FILLER LID SHIELD

- (a) Remove the nut from the fuel lid opener solenoid.
- (b) Remove the 4 screws.
- (c) Remove the fuel tank cap and the lid shield.

CAUTION:

- **Always keep the tank cap closed when it is not required to be open.**
 - **Keep all fire away during the operation.**
- (d) Remove the inner lid shield.
 - (e) Install the cap quickly.