


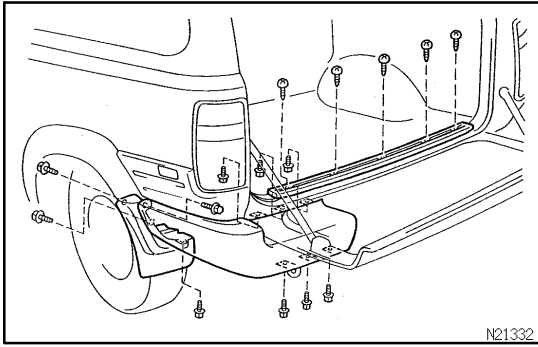

QUARTER OUTSIDE MOULDING REMOVAL


BO9G0-01

1. REMOVE REAR MUDGUARD


Remove the 6 screws and rear mudguard.

2. REMOVE THESE PARTS:


- Rear bumper extension
- Back door scuff plate

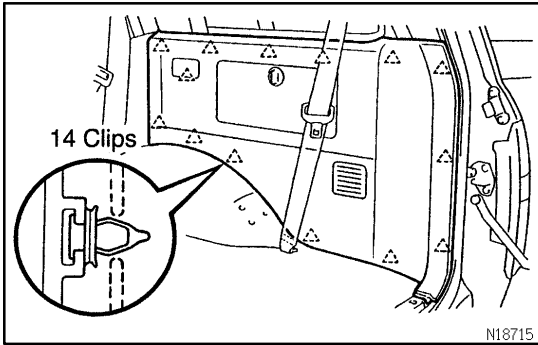

- Quarter trim (RH)

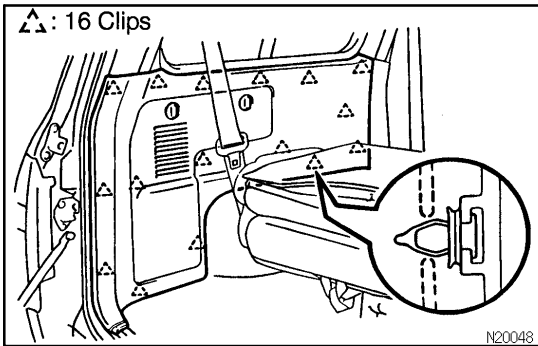


- Quarter trim (LH)

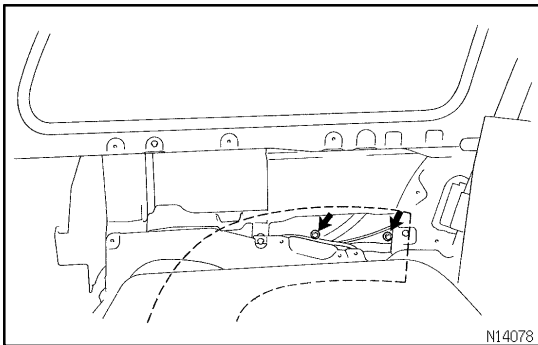


3. REMOVE QUARTER OUTSIDE MOULDING

- Remove the 2 nuts.

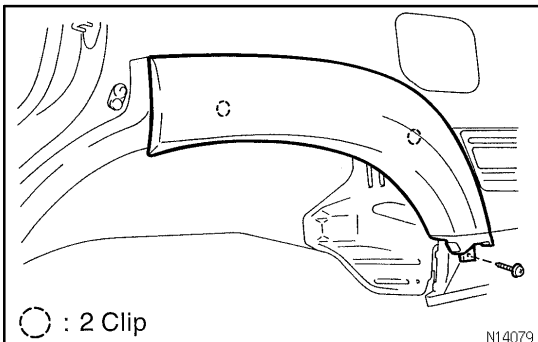

- Remove the screw.

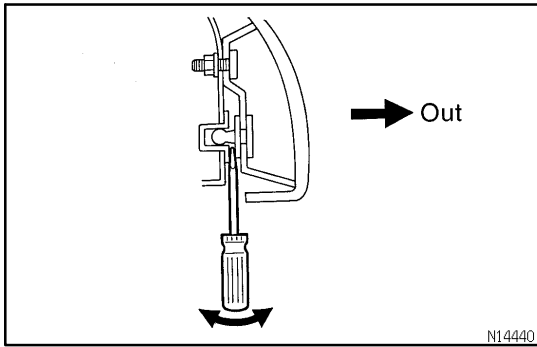

- (c) Insert the screwdriver pry out the rear wheel opening extension.