


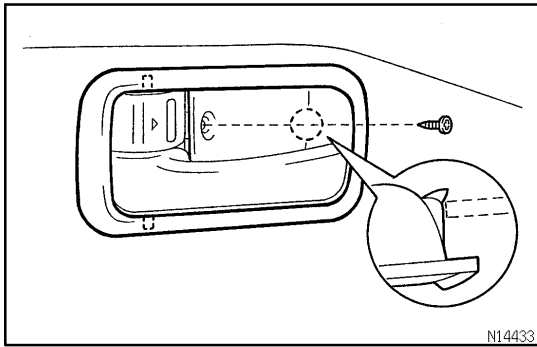


DISASSEMBLY

1. REMOVE THESE PARTS:


HINT:

Tape a screwdriver tip before use.


- (a) Door inside handle bezel

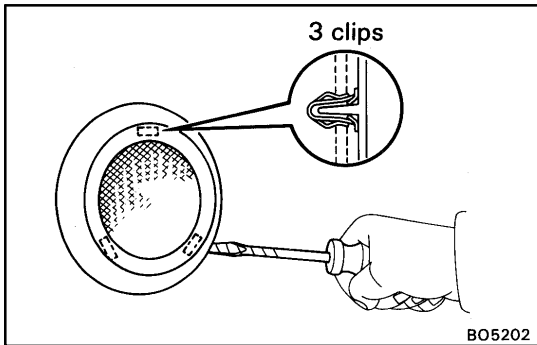

- (b) Door speaker cover

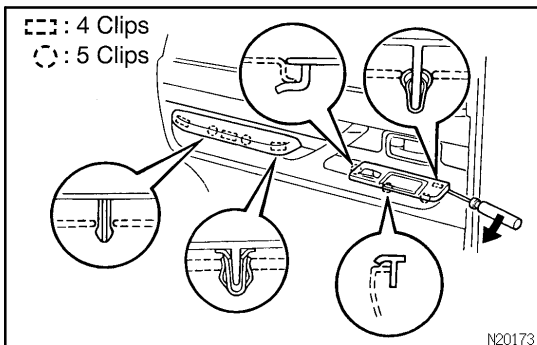

- (c) Ash tray
(d) Armrest base upper
(e) Armrest

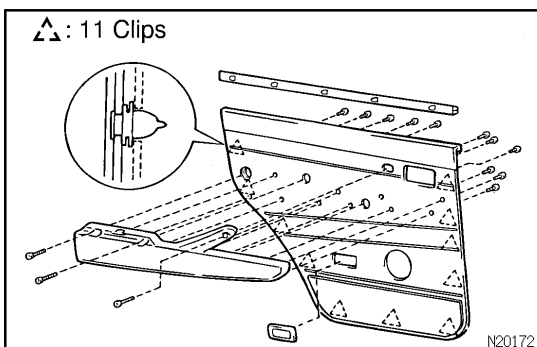

2. REMOVE DOOR TRIM

- (a) Remove the courtesy light.
(b) Remove the 3 screws from the door trim.
(c) Insert a screwdriver between the door and door trim to pry out.


NOTICE:

Be careful not to damage the door and door trim.

HINT:

Tape the screwdriver tip before use.

- (d) Remove the inner weatherstrip from the door trim.
(e) Remove the 11 screws and armrest base from the door trim.

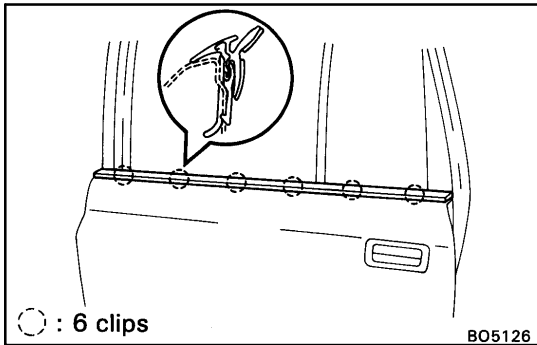**3. REMOVE THESE PARTS:**

- (a) Door belt moulding

HINT:

Pry out the clip from the edge of the panel, and remove the moulding.

- (b) Door weatherstrip

NOTICE:

Do not pull strongly on the weatherstrip as it may tear.

- (c) Door inside handle

- (d) Service hole cover

NOTICE:

At the time of reassembly, do not block the clip sealing with the tape.

HINT:

At the time of reassembly, bring out the link through the service hole cover.

- (e) Door speaker

- (f) Link protector



- (g) Locking link and door opening link

- (h) Door glass run

- (i) Rear lower frame


- (j) Quarter window glass with weatherstrip

- (k) Door glass

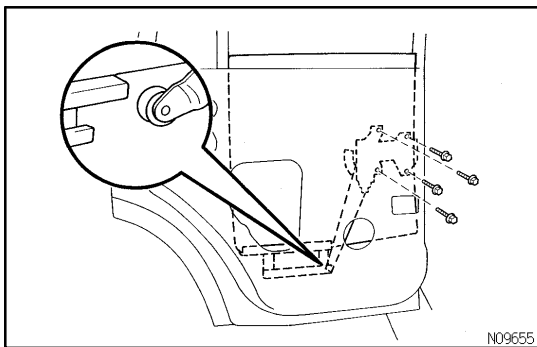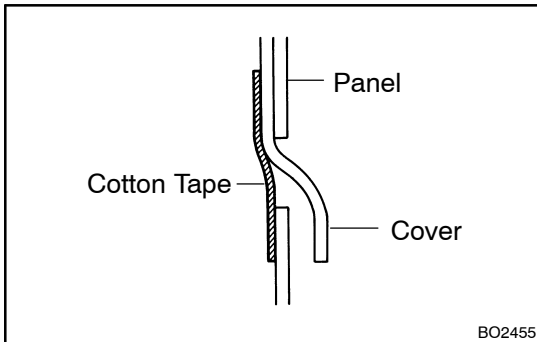

- (l) Window regulator

Torque: 5.0 N·m (50 kgf·cm, 43 in·lbf)

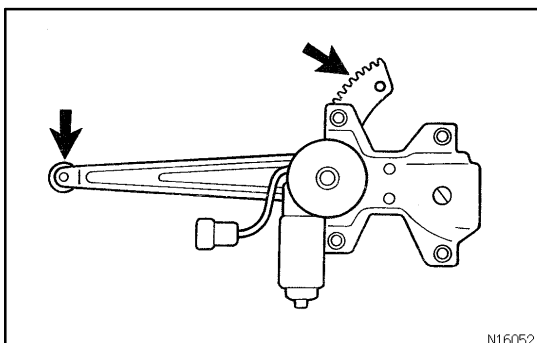


HINT:

At the time of reassembly, apply MP grease to the sliding surface and gears of the regulator.

NOTICE:

At the time of reassembly, do not apply grease to the spring.

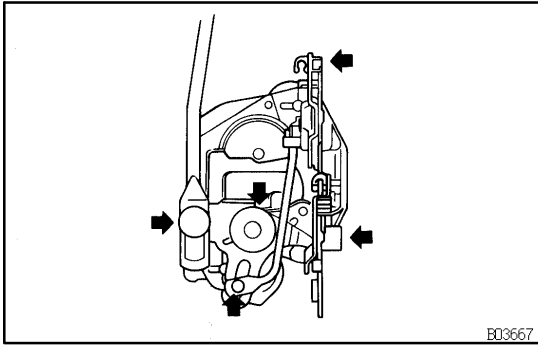

(m) Door lock

HINT:

At the time of reassembly, apply adhesive to the 3 screws.

Part No.08833-00070, THREE BOND 1324 or equivalent.

Torque: 5.0 N·m (50 kgf·cm, 43 in.·lbf)

HINT:

At the time of reassembly, apply MP grease to the sliding surface of the door lock.

(n) Door outside handle