



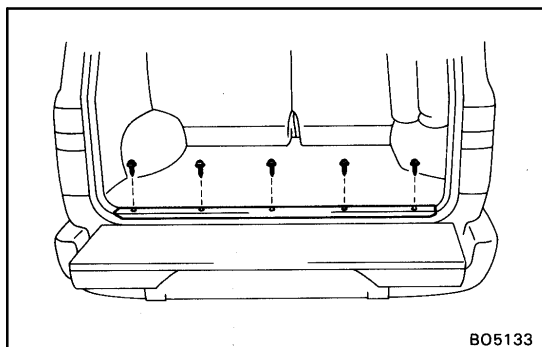


REMOVAL

1. REMOVE THESE PARTS:


- (a) Back door scuff plate
- (b) No.2 rear seat

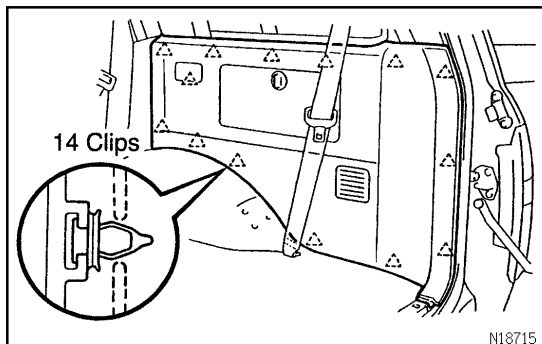


- (c) Quarter trim (RH)

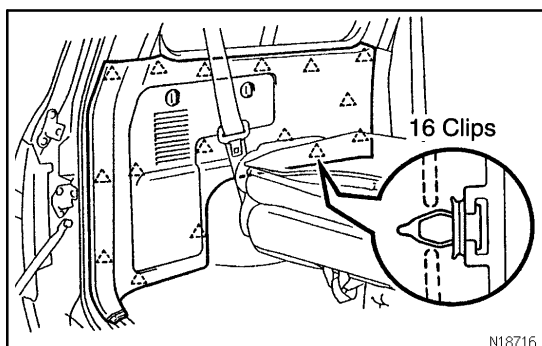


- (d) Quarter trim (LH)

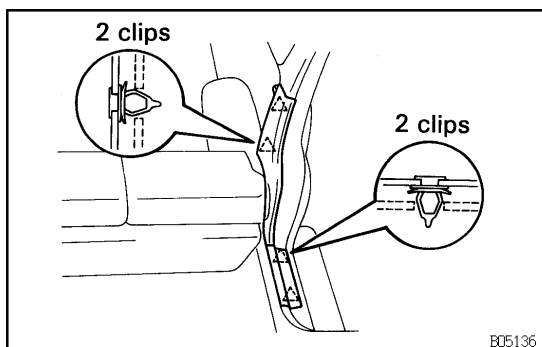


- (e) Step plates
- (f) Rear door scuff plates
- (g) Rear seat side garnishes
- (h) Cowl side trims
- (i) Front door opening trims
- (j) Rear door opening trims
- (k) Center pillar lower garnishes

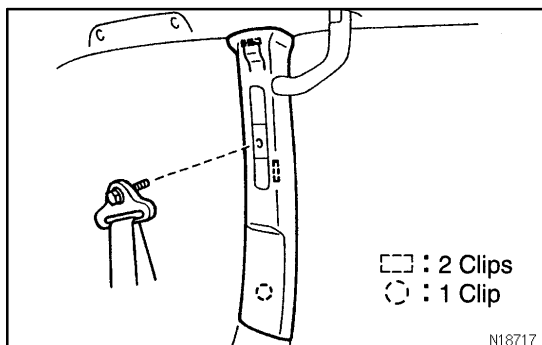


- (l) Front seat outer belt shoulder anchors
- (m) Center pillar upper garnishes
- (n) No.1 rear seat outer belt shoulder anchors
- (o) No.2 rear seat outer belt shoulder anchors

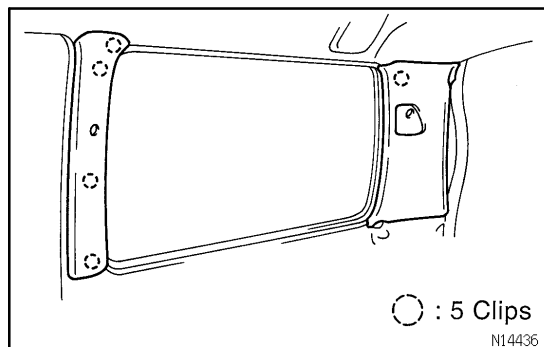

- (p) Quarter pillar garnishes
- (q) Rear pillar garnishes
- (r) Assist grips

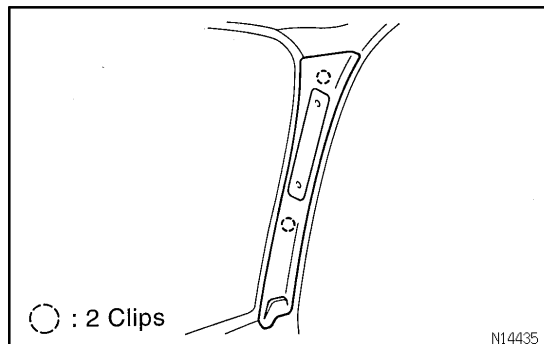

- (s) Front pillar garnishes
- (t) Sun visors and holders
- (u) Inner rear view mirror
- (v) No.1 room light
- (w) No.2 room light
- (x) Back door opening trim
- (y) Sliding roof opening moulding

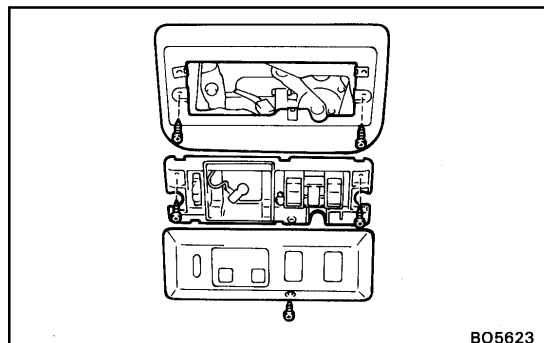


2. REMOVE PERSONAL LIGHT ASSEMBLY

- (a) Remove the screw.
- (b) Using a screwdriver, remove the personal light cover.

HINT:

Tape the screwdriver tip before use.

- (c) Remove the 2 screws and personal light assembly, then disconnect the connector.
- (d) Remove the 2 screws and bracket.

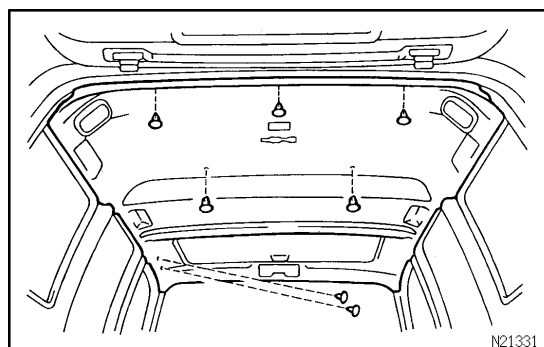

3. REMOVE ROOF HEADLINING

- (a) Using a clip remover, remove the 7 clips.
- (b) Remove the roof headlining.