


INSTALLATION

1. INSTALL THESE PARTS:

- (a) Wiper control relay
- (b) Wiper motor

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

- (c) Back door trim
- (d) Pull handle bezel
- (e) Pull handle

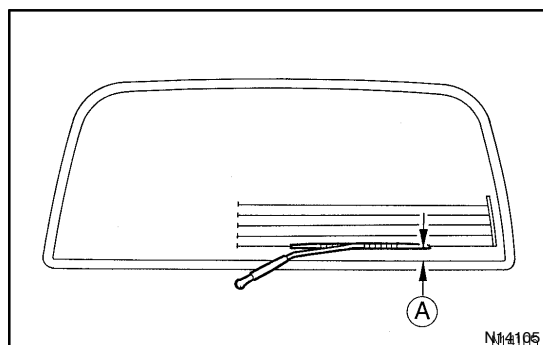

2. INSTALL REAR WIPER ARM

- (a) Install the wiper arm and operate the wipers once and turn the wiper switch OFF.
- (b) Adjust the installation positions of the wiper arm to the positions shown in the illustration.

"A" Approx. 40 mm (1.57 in.)

- (c) Torque the nut.

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)