


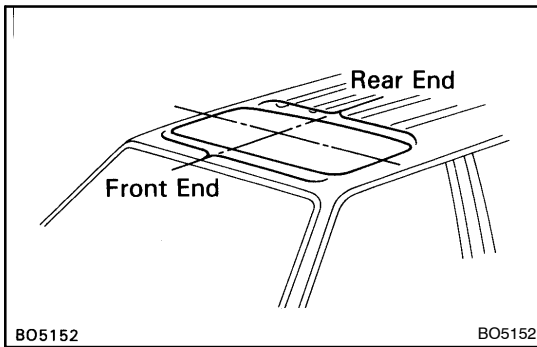

INSPECTION

INSPECT SLIDING ROOF GLASS ALIGNMENT

- (a) Start the engine and check the operation time of the sliding roof.

Operation time:

Approx. 5 sec.


- (b) Check for abnormal noise or binding during operation.
- (c) With the sliding roof fully closed, check for water leakage.
- (d) Check for a difference in level between the sliding roof weatherstrip and roof panel.

Front end:

0.9 – 3.9 mm (0.035 – 0.154 in.)

Rear end:

0.9 – 3.9 mm (0.035 – 0.154 in.)

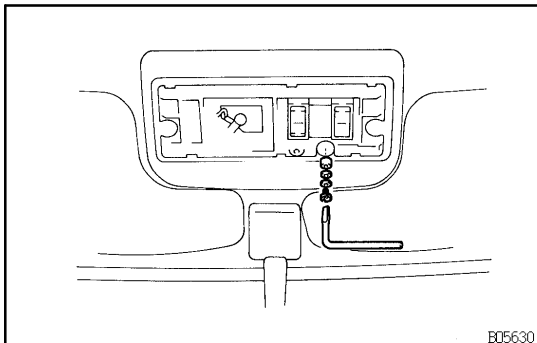

If the sliding roof does not operate:

- (1) Remove the control switch cover.
- (2) Remove the large screw inside.

NOTICE:

Be careful not to lose the spring washer or shim.

- (3) Manually operate the moon roof by inserting a special crank-shaped screwdriver into the hole and turning the drive shaft.