

REPLACEMENT

1. REMOVE BACK DOOR DAMPER STAY FROM UPPER BACK DOOR

Remove the bolt and back door damper stay from upper back door.

HINT:

While supporting the upper back door with your hand, remove the back door damper stay.

2. REMOVE BACK DOOR DAMPER STAY FROM BODY

Remove the bolt and support from the body.

3. REPLACE BACK DOOR DAMPER STAY

NOTICE:

- Do not disassemble the damper because the cylinder is filled with pressurized gas.
- If the damper is to be replaced, drill a 2.0 – 3.0 mm (0.079 – 0.118 in.) hole in the area shown in the illustration to completely release the high-pressure gas before disposing of it.
- When drilling, chips may fly out so work carefully.
- The gas is colorless, odorless and non-toxic.
- When working, handle the damper carefully. Never score or scratch the exposed part of the piston rod, and never allow paint or oil to get on it.
- Do not turn the piston rod and cylinder with the damper fully extended.

4. INSTALL BACK DOOR DAMPER STAY

Install the back door damper stay.

Torque: 7.8 N·m (80 kgf·cm, 69 in·lbf)

