


INSTALLATION

1. INSTALL BRAKE BOOSTER

- Install the booster and a new gasket.
- Install the clevis to the operating rod.
- Install and torque the booster installation nuts.

Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)


- Install the clevis pin into the clevis and brake pedal, and install the clip to the clevis pin.
- Install the pedal return spring.

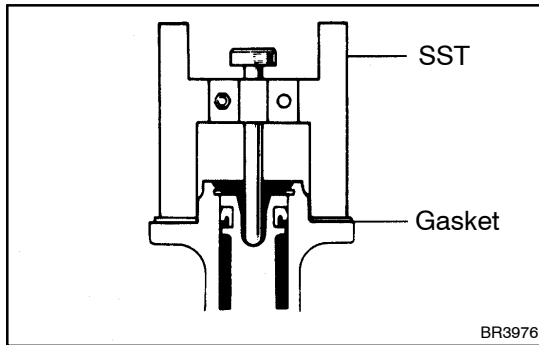

2. ADJUST LENGTH OF BOOSTER PUSH ROD

- Install a new gasket on the master cylinder.
- Set the SST on the gasket, and lower the pin until its tip slightly touches the piston.

SST 09737-00010

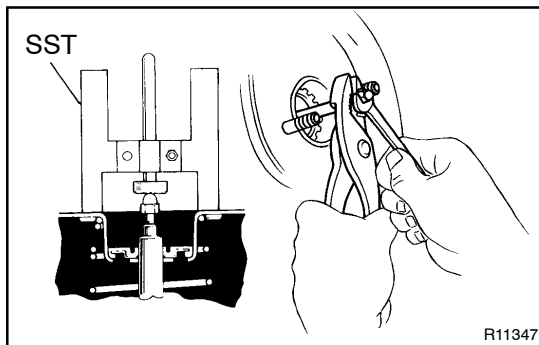

- Turn the SST upside down, and set it on the booster.
SST 09737-00010
- Measure the clearance between the booster push rod and pin head (SST).
Clearance: 0 mm (0 in.)
- Adjust the booster push rod length until the push rod lightly touches the pin head.

3. INSTALL MASTER CYLINDER (See page BR-9)

4. CONNECT VACUUM HOSE TO BRAKE BOOSTER

5. FILL BRAKE RESERVOIR WITH BRAKE FLUID AND BLEED BRAKE SYSTEM (See page BR-4)

6. CHECK FOR FLUID LEAKAGE

7. CHECK AND ADJUST BRAKE PEDAL

(See page BR-6)

8. DO OPERATIONAL CHECK (See page BR-15)