


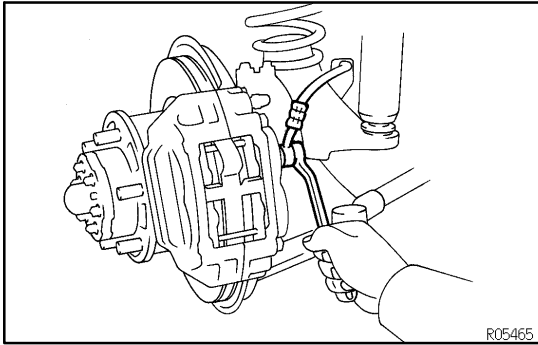

REMOVAL


1. REMOVE FRONT WHEEL

2. DISCONNECT FLEXIBLE HOSE

- (a) Remove the union bolt and 2 gaskets from the caliper, then disconnect the flexible hose from the caliper.

Torque: 30 N·m (310 kgf·cm, 22 ft·lbf)

- (b) Use a container to catch the brake fluid as it drains out.

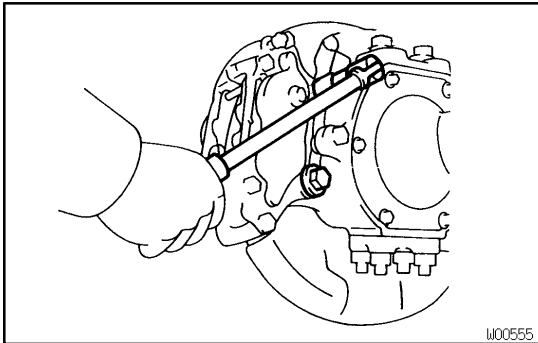

3. REMOVE CALIPER

- (a) Remove the 2 mounting bolts and caliper.

Torque: 123 N·m (1,250 kgf·cm, 90 ft·lbf)

- (b) Remove these parts:

- Clip
- 2 pins
- Anti-rattle spring
- 2 pads
- 4 anti-squeal shims