


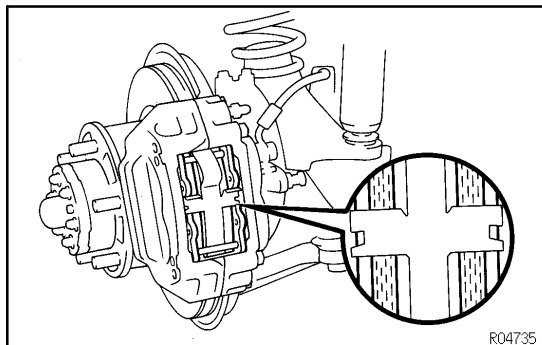

R04735


## REPLACEMENT

### 1. REMOVE FRONT WHEEL

### 2. INSPECT PAD LINING THICKNESS

- (a) Check the pad thickness and replace pads if not within the specification.

**Minimum thickness: 1.0 mm (0.039 in.)**

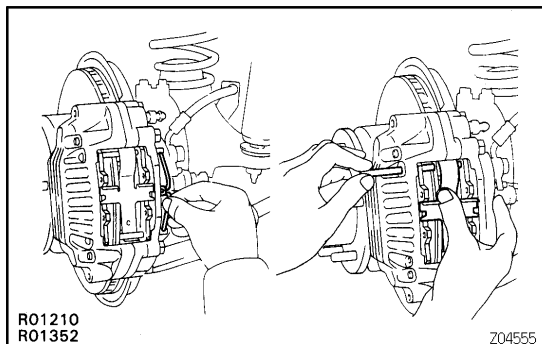R01210  
R01352


Z04555

- (b) Remove these parts:

- Clip
- 2 pins
- Anti-rattle spring
- 2 pads
- 4 anti-squeal shims

### NOTICE:

The anti-rattle spring and clip can be used again provided that they have sufficient rebound, no deformation, cracks or wear, and have had all rust, dirt and foreign particles cleaned off.

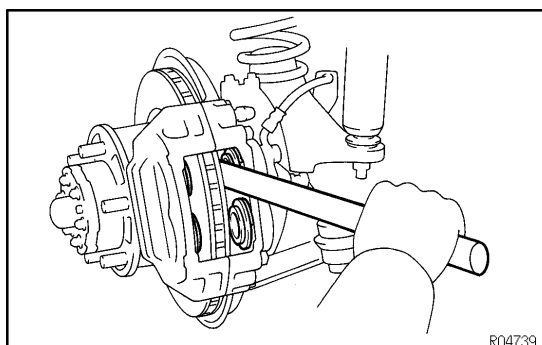

R04739

### 3. CHECK DISC THICKNESS AND RUNOUT

(See page [BR-25](#))

### 4. INSTALL NEW PADS

### NOTICE:

**When replacing worn pads, the anti-squeal shims must be replaced together with the pads.**

- (a) Draw out a small amount of brake fluid from the reservoir.  
 (b) Press in the pistons with a hammer handle or an equivalent.

### HINT:

- Always change the pad on one wheel at a time as there is a possibility of the opposite piston flying out.
- If the piston is difficult to push in, loosen the bleeder plug and push in the piston while letting some brake fluid escape.

- (c) Install the 2 anti-squeal shims to new pads.

### HINT:

Apply disc brake grease to both sides of the inner anti-squeal shims (See page [BR-19](#)).

- (d) Install the 2 pads.

**HINT:**

Apply disc brake grease to the caliper indicated by the arrows (See page [BR-31](#)).

**NOTICE:**

**Do not allow oil or grease to get on the rubbing face.**

- 5. INSTALL ANTI-RATTLE SPRING AND 2 PINS**
- 6. INSTALL CLIP**
- 7. INSTALL FRONT WHEEL**
- 8. CHECK THAT FLUID LEVEL IS AT MAX LINE**