


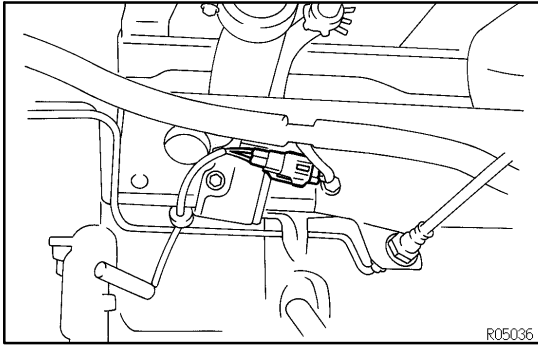

REMOVAL

HINT:

When replacing the sensor or sensor harness, replace the sensor and sensor harness together as a set.

1. DISCONNECT SPEED SENSOR CONNECTOR

- (a) Disconnect the speed sensor connector.
- (b) Remove the 3 clamp bolts and 2 clips holding the sensor wire harness from the suspension arm and frame.

2. REMOVE SPEED SENSOR

Remove the installation bolt and speed sensor from the axle end.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)