


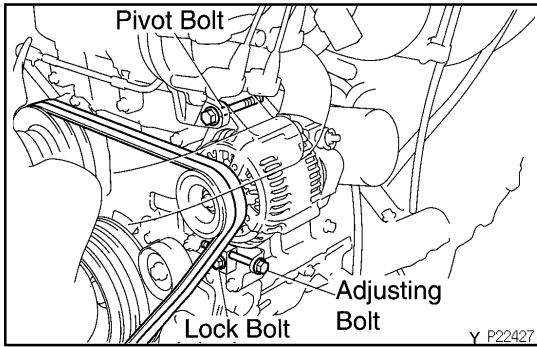

REMOVAL

1. REMOVE BATTERY AND BATTERY TRAY

2. DISCONNECT PS RESERVOIR

3. REMOVE DRIVE BELTS

- (a) Loosen the lock bolt, pivot bolt and adjusting bolt.
- (b) Remove the 2 drive belts.

4. REMOVE DRIVE BELTS

- (a) Loosen the lock bolt, pivot bolt and adjusting bolt.

Torque:


58 N·m (590 kgf·cm, 43 ft·lbf) for pivot bolt

21 N·m (210 kgf·cm, 15 ft·lbf) for lock bolt

- (b) Remove the 2 drive belts.

5. REMOVE GENERATOR

- (a) Disconnect the generator connector.
- (b) Remove the rubber cap and nut, and disconnect the generator wire.
- (c) Disconnect the generator wire clamp from the generator.

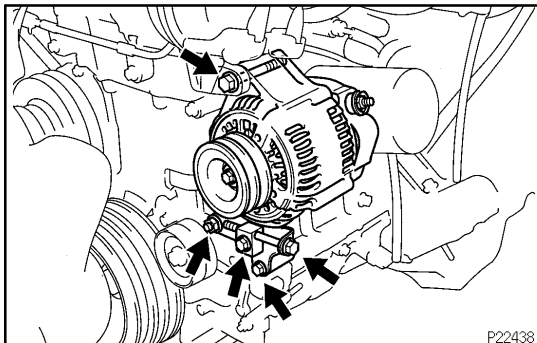

- (d) Remove the lock bolt, bolt, nut and drive belt adjusting bar.

Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)

- (e) Remove the pivot bolt and generator.