



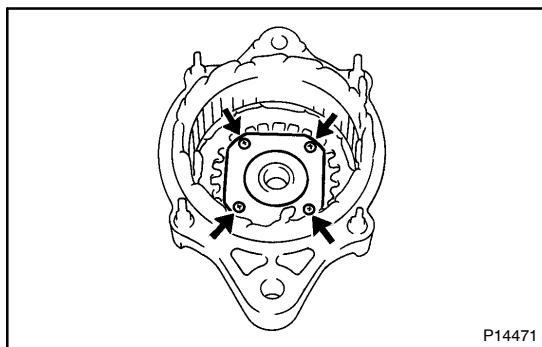


REPLACEMENT

1. REPLACE FRONT BEARING


- (a) Remove the 4 screws, bearing retainer and bearing.

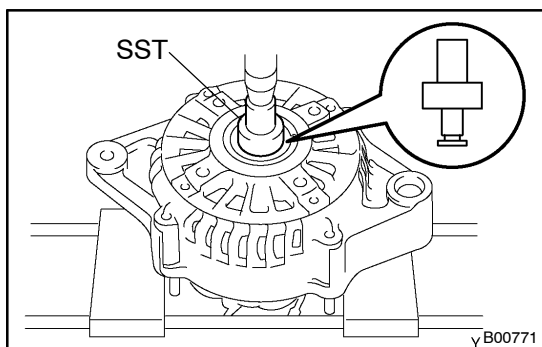

- (b) Using SST and a press, press out the bearing.
SST 09950-60010 (09951-00260, 09952-06010)

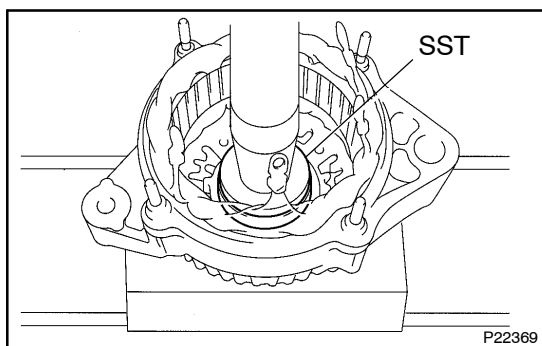

- (c) Using SST and a press, press in a new bearing.
SST 09950-60010 (09951-00500)
(d) Install the bearing retainer with the 4 screws.
Torque: 3 N·m (31 kgf·cm, 27 in·lbf)

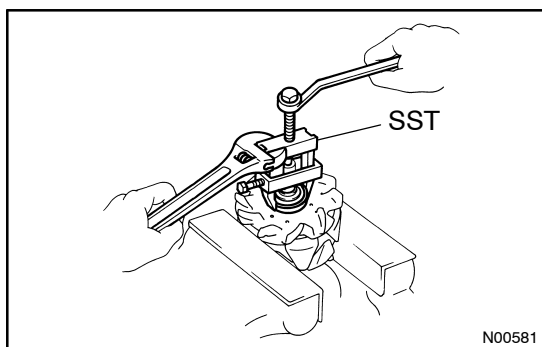


2. REPLACE REAR BEARING


- (a) Using SST, remove the bearing cover (outside) and bearing.
SST 09820-00021

NOTICE:


Be careful not to damage the fan.

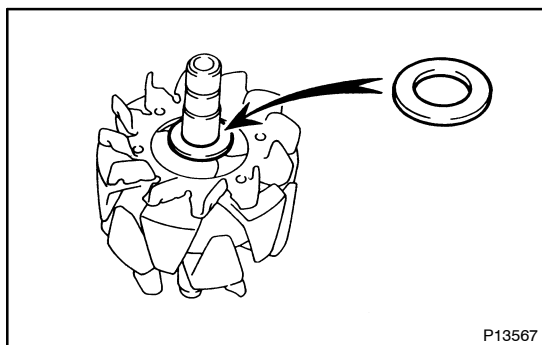

- (b) Remove the bearing cover (inside).
(c) Place the bearing cover (inside) on the rotor.

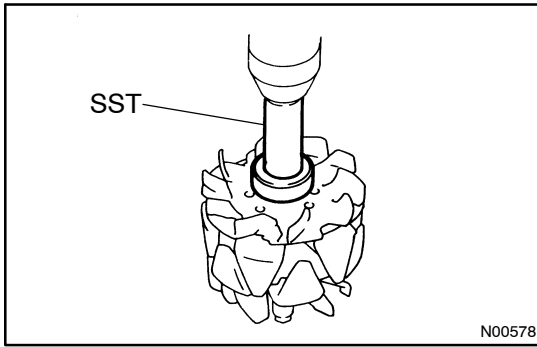

- (d) Using SST and a press, press in a new bearing.
SST 09820-00030

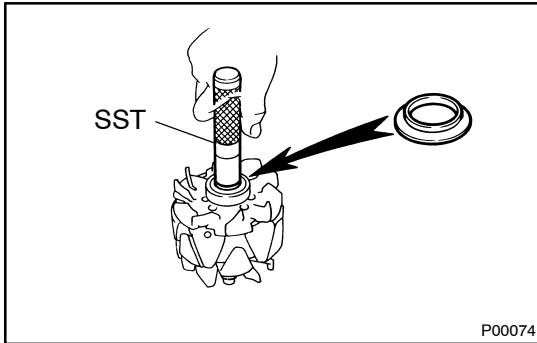

- (e) Using SST, push in the bearing cover (outside).
SST 09285-76010