

# COOLANT

## INSPECTION

CO010-04

### 1. CHECK ENGINE COOLANT LEVEL AT RESERVOIR TANK

- (a) The coolant level should be between the "LOW" and "FULL" lines.
- (b) If low, check for leaks and add coolant up to the "FULL" line when the engine is cold.

### 2. CHECK ENGINE COOLANT QUALITY

- (a) Remove the radiator cap.

#### **CAUTION:**

**To avoid the danger of being burned, do not remove the radiator cap while the engine and radiator are still hot, as fluid and steam can be blown out under pressure.**

- (b) There should not be any excessive deposits of rust or scales around the radiator cap or radiator filler hole, and the coolant should be free from oil.

If excessively dirty, replace the coolant.

- (c) Reinstall the radiator cap.